

**EMINENT**

Downloaded from [www.vandenborre.be](http://www.vandenborre.be)

**EM8660**  
**Wireless door / window contact**  
**(2-way communication)**

**en**

Manual

# EM8660 - Wireless door / window contact

## Table of contents

1.0 Introduction .....	2
1.1 Packing contents .....	2
2.0 Front window/door sensor .....	3
3.0 Inside the window/door sensor .....	3
3.1 Anti sabotage button.....	3
3.2 Group settings (jumpers) .....	4
4.0 Installation tips.....	5
4.1 Register the window/door sensor.....	5
5.0 Frequently Asked Questions and other related information.....	6
6.0 Service and support.....	6
7.0 Warning and points of attention .....	6
8.0 Warranty conditions.....	8

## 1.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has undergone extensive testing by Eminent's technical experts. Should you experience any problems with this product, you are covered by a five-year Eminent warranty. Please keep this manual and the receipt in a safe place.

 
*Register your product now on [www.eminent-online.com](http://www.eminent-online.com) and receive product updates!*

### 1.1 Packing contents

The following parts need to be present in the packing:

- EM8660 Wireless Door/ Window Contact
- Manual

## 2.0 Front window/door sensor

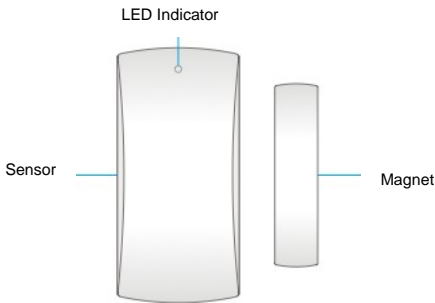


LED indicator :

Flashes 1x : Window/Door is detected as open.

Flashes quickly : Battery power low, exchange battery\*

\* You will receive a text message if battery level is low. The message contains the following information (up to sensor 9) sensor name with additionally the text 'battery almost empty'. From sensor 10 the name will be replaced for a zone nr. with additionally the text 'battery almost empty'.

## 3.0 Inside the window/door sensor

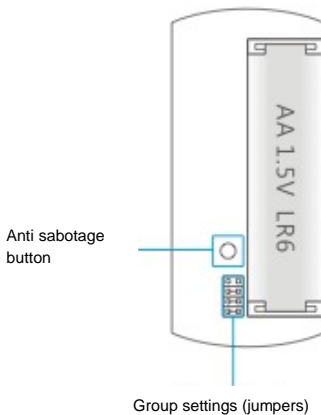 

### 3.1 Anti sabotage button

If the sensor is opened this switch will detect it and trigger the alarm.

 
### 3.2 Group settings (jumpers)

Every sensor can be configured to be added to a single group by setting the jumper settings; home-group, normal group, single group or 24-hours group.


Bellow you will see an overview of the meaning and how to configure the jumper settings for that type of zone.

*Remark : Determine before pairing with the alarm system in which group the sensor will be operational. Once the sensor is successfully paired with the system. The group cannot be changed after pairing!*


*Remark: If the group of a sensor needs to be changed All sensors need to be paired with the alarm system once more. It is not possible to remove one single sensor from a group ! (See chapter "Delete all wireless sensors by text message")*

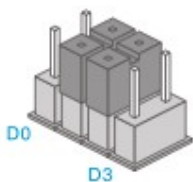


**Home-group**

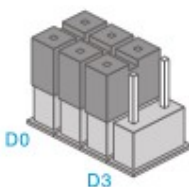 

**Normal-group**

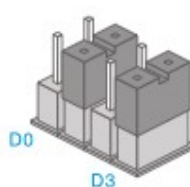 

**Single-group**

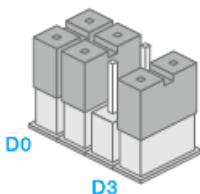 


**24-hours-group**

*Remark : It's recommended to install detectors that needs to be operational 24-hours for example: smoke detectors in the 24-hours-group.*

## 4.0 Installation tips

It's recommended to install the sensor on the frame (no movement) and to install the magnet on the door/window itself.

 Notice: The magnet needs to be placed on the right side of the sensor. The red LED will light up every time the door/window is opened!

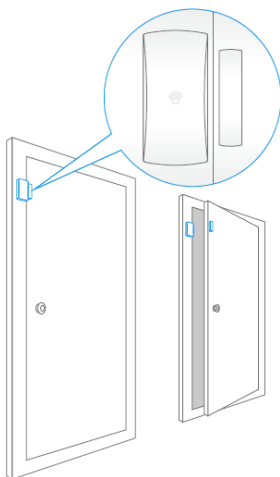

The distance between the sensor and the magnet must not exceed 1cm.

Mount both parts with the supplied double-sided tape. You can also choose to mount the sensor by using screws.

It's not recommended to install the sensor in a room with a lot of metal. Neither mount the sensor on constructions. Always check if the red LED will turn on when the door /window is opened.

### 4.1 Register the window/door sensor

Make sure the sensor and the magnet are located next to each other.

Enter the password and press  button on the control panel.

The LED will turn on. Now separate the magnet from the sensor. The sensor will be triggered. If you hear a beep the sensor is registered to the system. If you hear 2 beeps this indicates this sensor is already registered.

## 5.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Eminent will update these pages frequently to assure you have the most recent information. Visit [www.eminent-online.com](http://www.eminent-online.com) for more information about your product.

## 6.0 Service and support

This user manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please fill out the support form at the website [www.eminent-online.com/support](http://www.eminent-online.com/support).

You can also contact us by phone. Please check [www.eminent-online.com/support](http://www.eminent-online.com/support) for the helpdesk phone number and opening hours.

## 7.0 Warning and points of attention



Due to laws, directives and regulations set out by the European parliament, some (wireless) devices could be subject to limitations concerning its use in certain European member states. In certain European member states the use of such devices could be prohibited. Contact your (local) government for more information about this limitations.

Always follow up the instructions in the manual\*, especially where it concerns devices which need to be assembled.

Warning: In most cases this concerns an electronic device. Wrong/improper use may lead to (severe) injuries!

When you connect the device to the mains, make sure it will not be damaged or subject to (high) pressure.

A power socket is needed which should be close and easy accessible from the device.

Repairing of the device should be done by qualified Eminent staff. Never try to repair the device yourself. The warranty immediately voids when products have undergone self-repair and/or by misuse. For extended warranty conditions, please visit our website at [www.eminent-online.com/warranty](http://www.eminent-online.com/warranty).

Dispose of the device appropriately. Please follow your countries regulation for the disposal of electronic goods.

Please check below safety points carefully:

- Do not apply external force on the cables
- Do not unplug the device by pulling the power cable
- Do not place the device near heating elements
- Do not let the device come in contact with water or other liquids
- If there is any strange sound, smoke or odor, remove the device immediately from the power outlet.
- Do not put any sharp objects into the venting hole of a product
- Do not use any damaged cables (risk of electric shock)
- Keep the product out of reach of children
- Wipe off the product with soft fabric, not water mop.
- Keep the power plug and outlet clean
- Do not unplug the device from the power outlet with wet hands
- Unplug the device when you don't use it for a long time
- Use the device at a well ventilated place

*\*Tip: Eminent manuals are written with great care. However, due to new technological developments it can happen that a printed manual does not longer contain the most recent information. If you are experiencing any problems with the printed manual or you cannot find what you are looking for, please always check our website [www.eminent-online.com](http://www.eminent-online.com) first for the newest updated manual.*

*Also, you will find frequently asked questions in the FAQ section. It is highly recommended to consult the FAQ section. Very often the answer to your questions will be found here.*

## 8.0 Warranty conditions

The five-year Eminent warranty applies to all Eminent products, unless mentioned otherwise before or during the moment of purchase. After buying a second-hand Eminent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Eminent warranty applies to all Eminent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Eminent warranty. Products are not covered by the Eminent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Eminent. Eminent may use refurbished materials for repair or replacement of your defective product. Eminent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Eminent networking product will keep working when settings are changed by the internet providers. Eminent cannot guarantee the working of web services, apps and other third party content that is available through Eminent products. Eminent products with an internal hard disk have a limited warranty period of two years on the hard disk. Eminent could not be held responsible for any data lost. Please make sure that if the product stores data on a hard drive or other memory source, you will make a copy before you return the product for repair.

### When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.



Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.  
The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Eminent is a member of the Intronics Group