



Downloaded from www.vandenbore.be

acer
explore beyond limits™

Acer Electronic Projection Screen

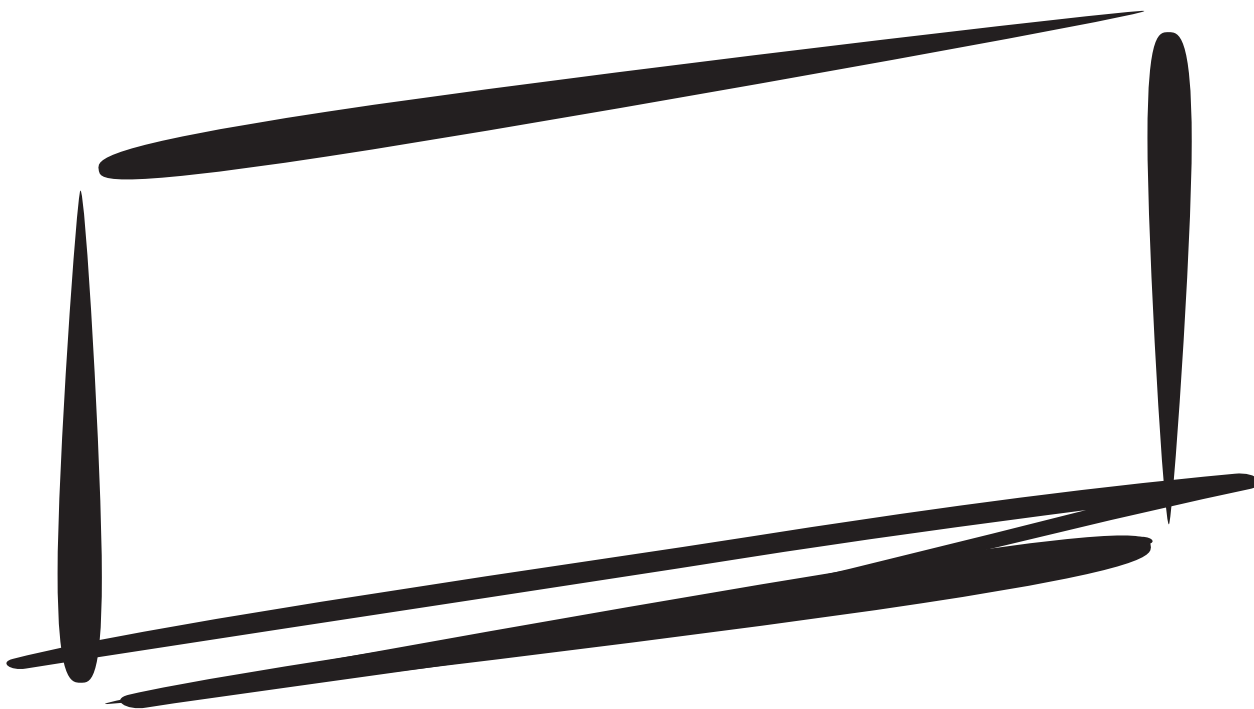


 User's Manual




Acer Electronic Projection Screen User Guide

1. The Control Box has one control cord and one power cord. Connect control cord to the right side position (hole) of top screen bar (# illustration A). Then, connect to power cord (# illustration B) to a suitable power supply. Press "DOWN" button on Control Box to make the screen in downward direction (# illustration C) and press "STOP" button to stop at any position you want.

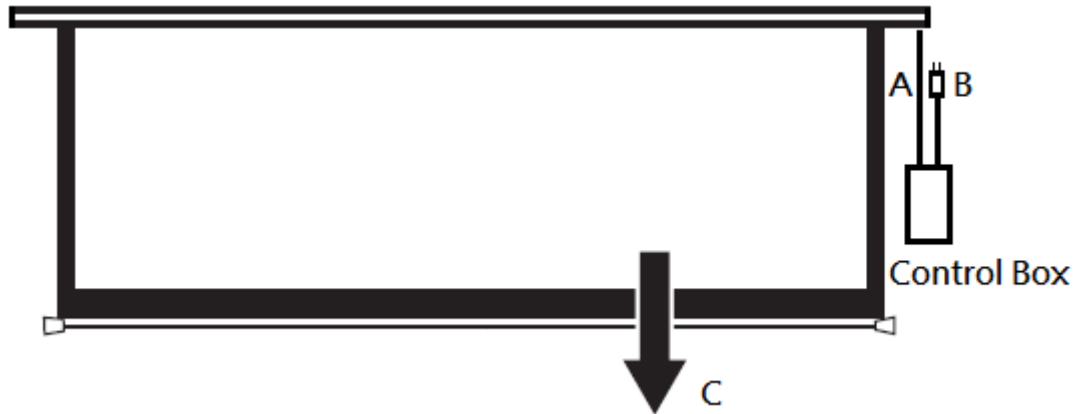

2. To store the screen, press "UP" button on Control Box to make the screen in upward direction (# illustration D).

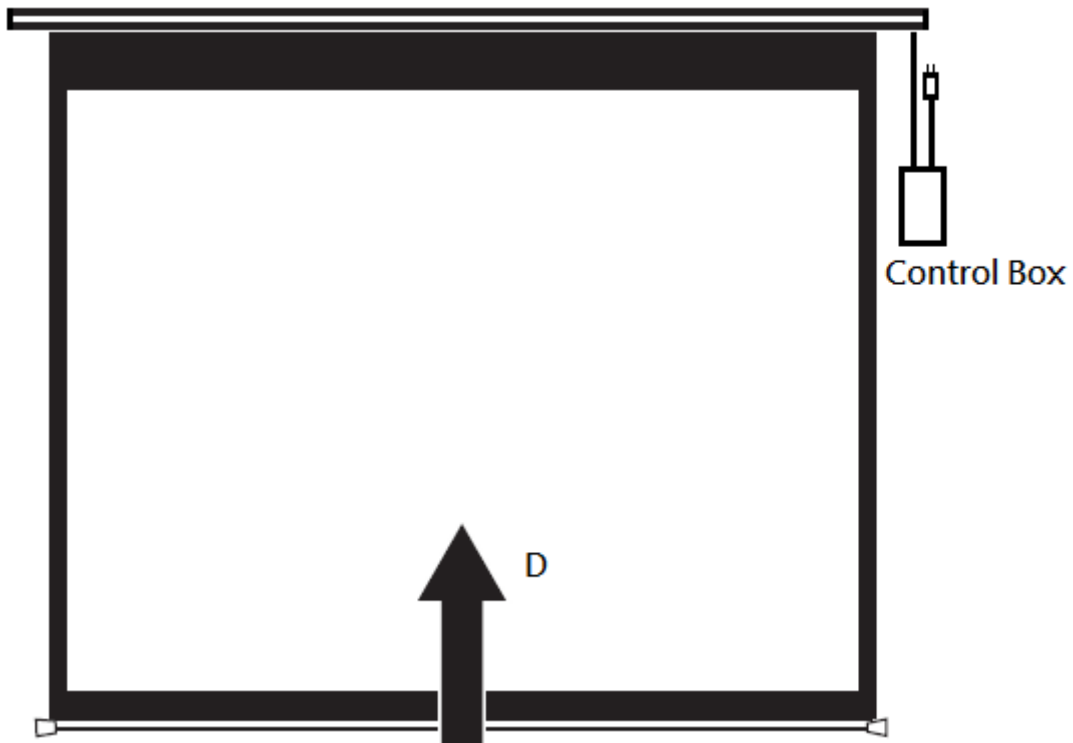


Note: The screen can be operated by either Control Box or remote control, and just press the UP/DOWN/STOP button to adjust the screen directly.

宏碁电动幕操作指南

1. 线控开关盒的一端为开关端子请插入银幕右侧之端子槽内(图 A)，另一端为电源(图 B)请插至插座。线控开关盒上三个按键各为「▼」、「■」、「▲」分别控制幕面向下、停止、向上之动作。
按「▼」键，银幕将直接下降至预设下限位置(图 C)；按「■」停止键，银幕可在上下限范围间任一位置停止。



2. 预收幕面时，按下「▲」键，即会自动上升收回(图 D)。

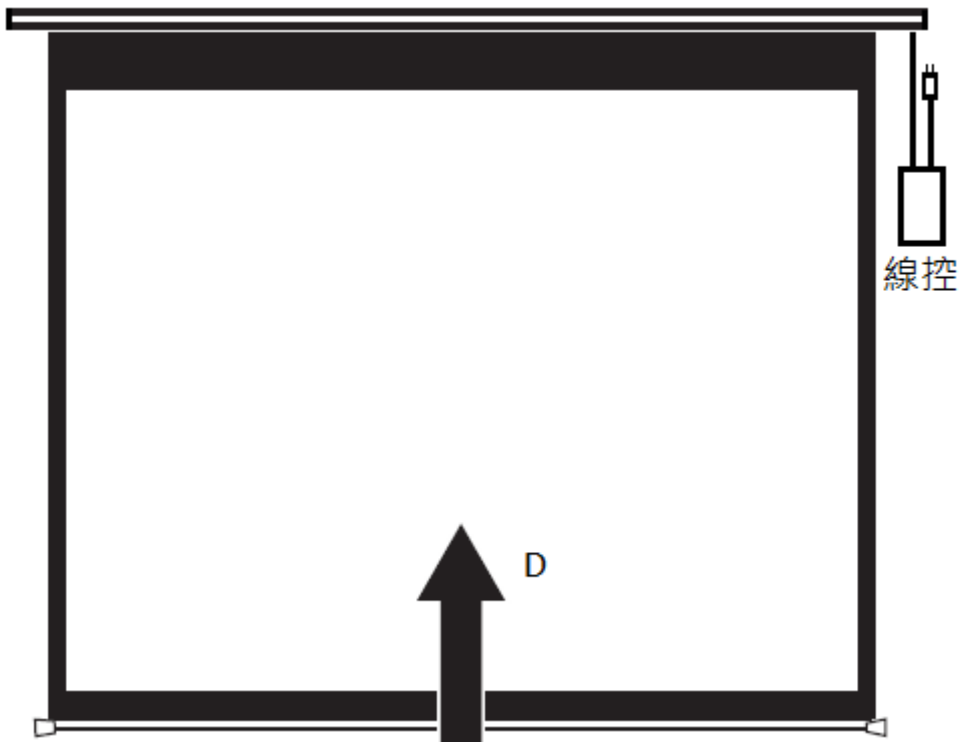

贴心提醒: 银幕可由线控开关盒或遥控器直接控制幕面向上、向下或停止。