

Downloaded from [www.vandenborre.be](http://www.vandenborre.be)



# Acer Tripod Screen



Recyclable Paper

User's Manual


# Acer Tripod Screen User Guide

## I. How to unfold the display:


- 1 Hold the top of the plastic part at the middle of the black tripod display (see figure 1) and push it downward to unfold the tripod stand at its bottom.
- 2 Insert the groove at the middle of the white display case (see figure 2) into the protruding part of upper handle of the black tripod stand (see figure 3) in a tilting angle of 135 degrees; when the insertion is completed, rotate the white display case in the horizontal direction (see figure 4).
- 3 Hang the upper tie bar of the white display case onto the groove of the rod at the top of the black tripod display (see figure 5).
- 4 Loosen the plastic button on the black tripod display by moving it upward (see figure 6) and when the pipe in the tripod rod is raised to a certain height, fasten the button by moving it downward to fix the height of the tripod.
- 5 Loosen the blue cramp on the tripod by moving it upward, then hold the tripod handle by hand to unfold the display downward to a proper lower position (see figure 7).
- 6 See figure 8 for an illustration of the installed tripod display.

## II. How to fold the display

- 1 Loosen the blue cramp on the tripod by moving it upward (see figure 7), then hold the tripod handle by hand to push the display case horizontally upward to a proper height so that there is sufficient distance for the tripod below the case to slide and become completely folded.
- 2 Loosen the plastic button on the black tripod display by moving it upward (see figure 6) and when the tripod rod is lowered to a proper height, press the button to fix this height.
- 3 After the upper tie bar of the white display case is removed from the groove of the rod at the top of the black tripod display (see figure 5), fold the display into the white case.
- 4 Hold the top of the plastic part at the middle of the black tripod display (see figure 1) and push it upward to fold the tripod stand at its bottom.
- 5 After the white display case is rotated in vertical direction, fix the groove hole at one end of the white case at the protruding point at the top of the black tripod display (see figure 9).
- 6 Adjust the total height of the black tripod stand by following the above procedures and make sure that the stand is taller than the white case to avoid damage to the white display case; then the folding of the tripod display is completed (see figure 10).
- 7 Upon the completion of display folding, hold the upper handle of the tripod stand for transportation (see figure 11).

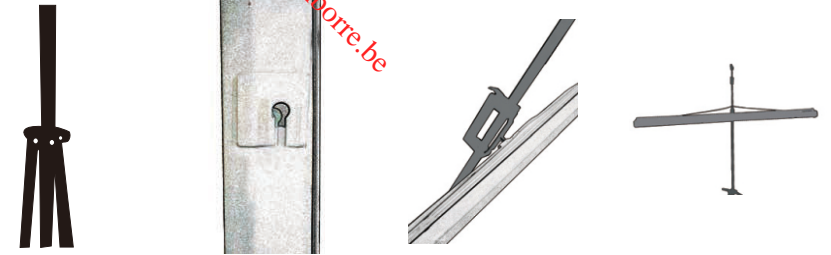

1 2 3 4

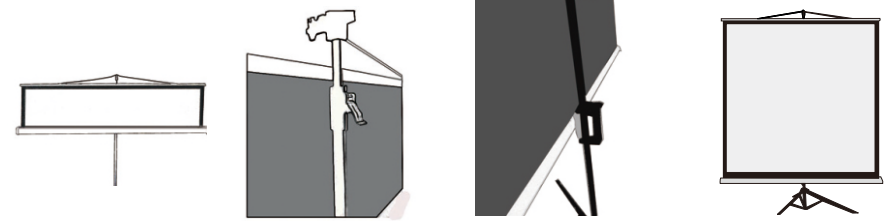

5 6 7 8



9 10 11

Downloaded from www.vandenborre.be