


Polaroid Now

- A** Shutter Button
- B** Lens
- C** Flash
- D** Viewfinder
- E** Self-timer & Double Exposure*
- F** Film Door Button
- G** Flash ON | OFF Button*
- H** ON | OFF Button
- I** Film Counter LED
- J** Neck Strap Loop
- K** Battery Level Indicator

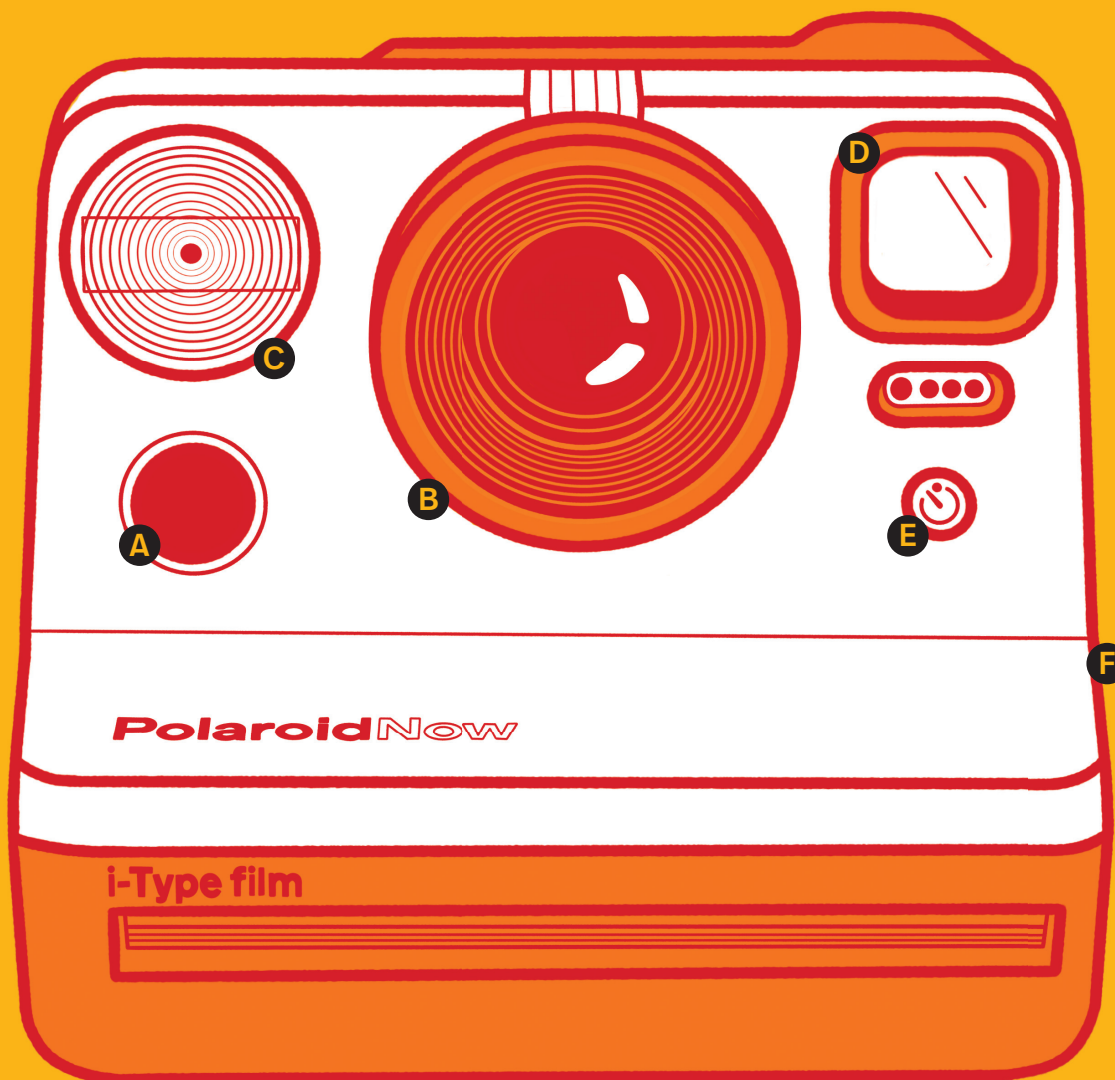

This camera works with

I-TYPE FILM

600 FILM

Have a problem,
or a question you
need answered?

USA/Canada
usa@polaroid.com
+1-212-219-3254

**Contact our
Customer
Support Team**

EU/Rest of World
service@polaroid.com
00800 5770 1500

or visit polaroid.com/help

* Explore more features and download the full manual
at polaroid.com/now-manual

- Battery full
- Battery half full
- Battery low

Polaroid NOW

- 1 Turn on the Polaroid Now camera by pressing ON/OFF button.
- 2 Open the film door.
- 3 Insert the film pack darkslide up and with the tab facing toward you.
- 4 Close the film door. The darkslide covered by the film shield will eject.
- 5 Remove the darkslide and allow the film shield to roll back in.
- 6 Aim at your subject and press the shutter button. The flash will trigger automatically.
- 7 To shoot without flash, press the flash button before each shot.
- 8 The photo covered by the film shield will eject.
- 9 Don't shake the photo! Place your photo in a dark place or face down on a flat surface.

i-Type Camera

Quick Start Guide

