


# PROLINE

## ELECTRIC FAN

MODEL: BA35

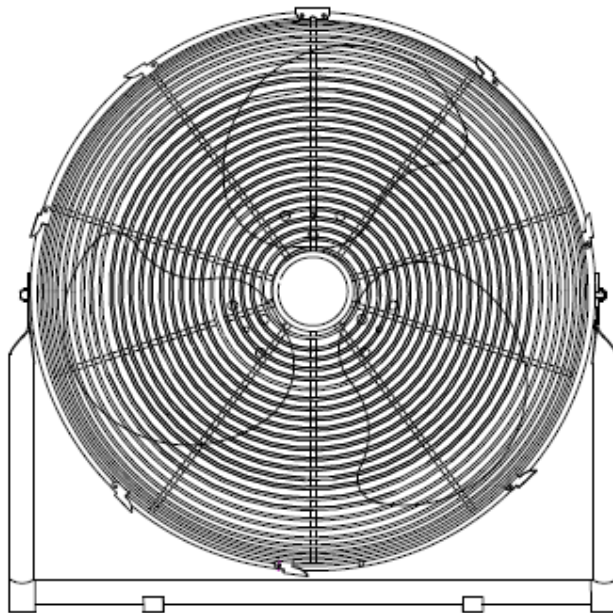

## INSTRUCTION MANUAL

## WARNINGS

- ❖ This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.
- ❖ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- ❖ Children should be supervised to ensure that they do not play with the appliance.
- ❖ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## IMPORTANT SAFETY INSTRUCTIONS

- ❖ Make sure the appliance is placed on a stable surface when used.
- ❖ Do not let hair, net curtains, tablecloths or loose clothing come into contact with the moving parts of the fan as it may cause damage or injuries.
- ❖ Do not use this fan near a window that may have condensation on it.
- ❖ Do not use this fan with any external semi-conductor speed controller.
- ❖ Do not use this fan in areas where flammable liquids are used or stored.
- ❖ The fan should be unplugged from the mains supply when not in use.
- ❖ Turn the fan off and unplug it from the mains socket before moving it from one place to another or cleaning.
- ❖ Before any cleaning or maintenance of the fan, please switch the fan off and remove the mains plug.

## OPERATION

1. Place the fan on a stable, level surface.
2. Connect the mains plug to the mains socket.
3. To turn the fan on, press the fan speed button located at the rear of the fan to select the desired speed.  
1= Low speed    2=Medium speed    3= High Speed
4. To adjust the direction of fan, hold the stand and gently tilt the fan until the desired position is reached.

**CAUTION: Care should be taken at all times to prevent hands from being pinched.**



5. To turn the fan off, press the button “0”.

### **CLEANING AND CARE**

1. Unplug the fan from the mains socket before cleaning.
2. Clean exterior surfaces with a damp cloth.

#### **NOTE:**

- ❖ Do not immerse the fan into water or any other liquid.
- ❖ Do not use harsh chemicals or abrasive cleaners to clean the appliance as these may damage the surface of the appliance.

### **SPECIFICATIONS**

Ratings: 220-240V~ 50Hz  
65W

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.