PURE

Voca



Voca safety instructions

- 1. Read these instructions All the safety and operating instructions should be read before this product is operated.
- 2. Keep these instructions The safety and operating instructions should be retained for future reference.
- 3. Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions All operating and use instructions should be followed.
- Clean only with dry cloth.
- 6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- 8. Unplug the apparatus during lightning storms or when unused for long periods of time.
- 9. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, does not operate normally, or has been dropped.
- 10. To reduce the risk of electric shock, do not remove plastic cover or screws as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- 11. Avoid liquids getting into Voca, Should not be immersed in water, or used where this may happen, such as a bathroom.
- 12. The equipment's ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- 13. WARNING Please refer to the information on the bottom exterior of the enclosure for electrical and safety information before installing or operating the apparatus.
- 14. WARNING To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 5. WARNING: The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.
- 16. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Warning: Danger of explosion if battery is incorrectly replaced. Replace only with a genuine Pure internal Li-ion rechargeable battery. Battery replacement should only be carried out by Pure or authorised representatives.

To replace the battery pack, contact your local dealer or visit the Pure technical support site at support.pure.com.

Dispose of the battery as per normal Lithium ion rechargeable batteries according to the local laws and regulations of your region. Some batteries may be accepted for disposal at your local recycling centre.

Do not tear or remove the plastic covering or any part of the battery. Do not puncture, modify, drop, throw, or cause other unnecessary shocks to the battery. Batteries may present a risk of fire, explosion, or chemical burn if mistreated.

Do not dispose of the battery in a fire or incinerator, or leave in hot places such as a motor car under direct sunlight. Do not store batteries near an oven, stove, or other heat source.

Do not connect the battery directly to an electrical source, such as a building outlet or automobile power-point. Do not place batteries into a microwave oven, or into any other high-pressure container.

Do not immerse the battery in water or otherwise get it wet.

Do not short circuit the battery.

and enbor

Voca

Thank you for choosing Voca. This manual will get you up and running in no time and explains how to make the most of Voca's great features. If you need additional help with topics not covered in this manual, please visit the Pure support pages at support.pure.com.



Contents


- 3 Overview
- 3 Controls
- 4 Rear connectors
- 5 Getting started
- 7 Using Voca to make or answer phone calls
- 7 Making a phone call
- 7 Answering an incoming call
- 7 Rejecting an incoming call
- 8 Technical specifications





Overview

Controls

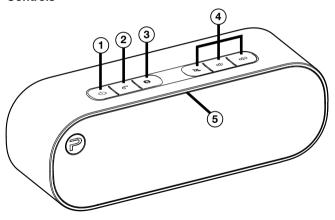



 Press and hold to switch Voca on or off.



 Press to answer/hang-up a phone call from a paired mobile phone (see page 7 for more information).



3. Press to pair with a new Bluetooth device.



4. Press to mute volume*.



Press to decrease volume.




Press to increase volume.


5. Microphone for phone calls.

^{*}The mute button does not mute Voca's microphone.

Rear connectors

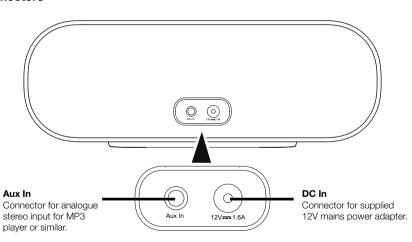


Getting started

 



  Insert the connector of the mains power adapter into the socket on the rear of Voca and plug in to the mains power supply.
 Note: If Voca's battery needs charging, the power light will start to flash orange. Voca's power light will turn off once the battery is fully charged.



2. Hold down the power button (\circlearrowleft) on the top of Voca until it lights steady green.





 Check that the Bluetooth icon (3) on the top of Voca is flashing blue. If not, press the Bluetooth button until the Bluetooth icon starts to flash blue.

 Open the Bluetooth settings on your Bluetooth device (see your Bluetooth device manual for more information) and select 'Voca' from the list of available devices.

Voca will sound a tone and the Bluetooth icon (3) on the top of Voca will light steady blue to indicate that pairing has completed.

Select the content that you want to listen to on your Bluetooth device.


Your selected content will start to play on Voca.

Note: Voca will automatically enter standby after 30 minutes of inactivity.

Using Voca to make or answer phone calls

If you have paired Voca to a mobile phone, you can use Voca to place or answer phone calls (see page 5 to find out how to pair your phone to Voca).

Note: Make sure that you are close enough to speak into the microphone when making phone calls.

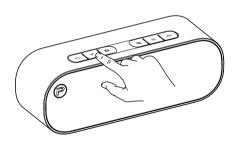

Making a phone call

To make a phone call using Voca, dial the number that you want to call on your mobile phone. When you have finished your call, briefly press the button.

Answering an incoming call

When your phone receives a call, Voca will stop playing whatever you are listening to and make a ringing sound. To answer the call, briefly press the button. Briefly press the button again when you want to end the call. If you were listening to content stored on your phone, Voca will switch back to whatever you were listening to previously.

Rejecting an incoming call

If you receive a call that you do not want to answer, hold down the $\stackrel{\textstyle \leftarrow}{\mathcal{C}}$ button.

Technical specifications

Speakers 2 x 1.5" stereo speakers

Audio output 2 x 5W, stereo

Input connectors 12V DC power adaptor socket (110-230V supplied), 3.5mm line-in for auxiliary devices

Controls Power, Phone answer/reject/hang-up, Bluetooth connection, Mute, Volume-, Volume+

Mains power supply Adapter:

Input 100-240V AC, 50/60Hz, 0.5A;

Output 12V DC, 1.6A

Main unit: 12V DC, 1.6A

Battery Rechargeable 1750mAh, Charge time: 2.5hrs, Battery life: 10hrs

 Dimensions
 189 mm wide x 55 mm deep x 67 mm high

 Bluetooth
 A2DP1.2, HFP1.6, HSP1.2, AVRCP1.4

AZDET.Z, TILET.O, HOET.Z, AVNOET.

CE marked. Hereby, Pure, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The Declaration

of Conformity may be consulted at http://www.pure.com/R&TTE-DoC.

Approvals

Warranty information

Imagination Technologies Limited warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of three years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults: it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at: http://support.pure.com.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Voca, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright

Copyright © 2014 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted. transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 1 September 2014.

Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.



PURE

www.pure.com connect.pure.com www.facebook.com/pure

Pure

Hure Imagination Technologies Limited Home Park Estate Kings Langley Herts, WD4 8LZ United Kingdom www.pure.com http://support.pure.com