




WAM250

Front Panel

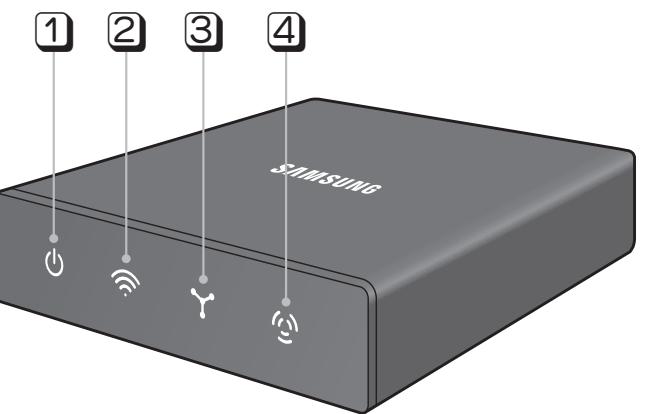


Wireless Audio - Multiroom HUB

User Manual



AH68-02717C-01

What's included

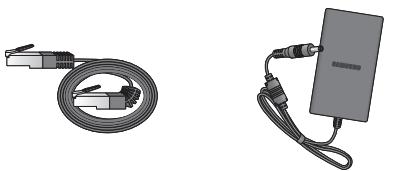


1

LAN cable

Power Adaptor

User Manual

Rear Panel

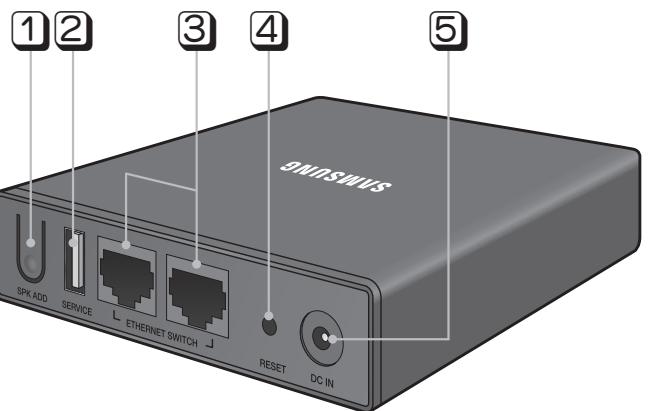

English

1



This indicator turns on when power is supplied to the HUB.

2



This indicator blinks when the HUB is in pairing mode. After pairing is complete, this indicator stops flashing and operates in normal mode.

3



This indicator turns on when the HUB is connected to a wireless router or an Ethernet cable.

4



This indicator turns on when the HUB is set to Repeater mode and used to expand wireless Wi-Fi coverage in a network that includes another HUB and a wireless router.

If you have trouble connecting the HUB and Wireless Audio - Multiroom because the signal is blocked or the distance between them is too great, add a new HUB in Repeater mode to expand wireless coverage.

English

1



Ce voyant s'allume lorsque le HUB est mis sous tension.

2



Ce voyant clignote lorsque le HUB est en mode d'association. Une fois l'association terminée, ce voyant s'arrête de clignoter et fonctionne en mode normal.

3



Le mode d'association continue pendant une période pré définie. Le voyant peut continuer à clignoter une fois que l'association est terminée.

4



Ce voyant s'allume lorsque le HUB est connecté à un routeur sans fil avec un câble Ethernet.

Ce voyant s'allume lorsque le HUB est réglé sur le mode Répéteur et utilisé pour agrandir la couverture Wi-Fi sans fil dans un réseau comprenant au moins un HUB et un routeur sans fil.

Si vous rencontrez des difficultés pour connecter le HUB et l'autre audio sans fil Multiroom car le signal est bloqué ou la distance entre eux est trop importante, ajoutez un nouveau HUB en mode Répéteur pour étendre la couverture sans fil.

Si vous avez des difficultés pour connecter le HUB et l'autre audio sans fil Multiroom car le signal est bloqué ou la distance entre eux est trop importante, ajoutez un nouveau HUB en mode Répéteur pour étendre la couverture sans fil.

Français

1



Ce voyant s'allume lorsque le HUB est mis sous tension.

2



Ce voyant clignote lorsque le HUB est en mode d'association. Une fois l'association terminée, ce voyant s'arrête de clignoter et fonctionne en mode normal.

3



Le mode d'association continue pendant une période pré définie. Le voyant peut continuer à clignoter une fois que l'association est terminée.

4



Ce voyant s'allume lorsque le HUB est connecté à un routeur sans fil avec un câble Ethernet.

Ce voyant s'allume lorsque le HUB est réglé sur le mode Répéteur et utilisé pour agrandir la couverture Wi-Fi sans fil dans un réseau comprenant au moins un HUB et un routeur sans fil.

Si vous rencontrez des difficultés pour connecter le HUB et l'autre audio sans fil Multiroom car le signal est bloqué ou la distance entre eux est trop importante, ajoutez un nouveau HUB en mode Répéteur pour étendre la couverture sans fil.

Si vous avez des difficultés pour connecter le HUB et l'autre audio sans fil Multiroom car le signal est bloqué ou la distance entre eux est trop importante, ajoutez un nouveau HUB en mode Répéteur pour étendre la couverture sans fil.

Deutsch

1



Diese Anzeige leuchtet auf, wenn der HUB an die Netzspannung angeschlossen ist.

2



Diese Anzeige blinkt, wenn der HUB eine Verbindung herstellt.

Nachdem die Verbindung hergestellt ist, hört die Leuchte auf zu blinken und leuchtet stetig.

Der Versuch eines Verbindungsauftaus wird innerhalb der eingestellten Zeitdauer ausgeführt.

Die Leuchte kann unter Umständen weiter blinken, nachdem der Verbindungsauftaus abgeschlossen ist.

Diese Anzeige leuchtet auf, wenn der HUB über ein Ethernet-Kabel an einen Wi-Fi-Router angeschlossen ist.

Diese Anzeige leuchtet auf, wenn der Hub als Repeater verwendet wird, um die Reichweite des aus einem weiteren HUB und einem Wi-Fi-Router bestehenden Wi-Fi-Netzwerks zu vergrößern.

Wenn Sie Schwierigkeiten haben eine Verbindung zwischen dem HUB und dem Audio-Funkübertragungssystem - Multiroom herzustellen, weil das Signal gestört wird oder die Entfernung zu groß ist, fügen Sie einen neuen HUB im Repeater Modus hinzu, um die Wi-Fi-Reichweite zu erhöhen.

Nederlands

1



Dit lampje gaat branden wanneer de HUB stroom krijgt.

2



Dit lampje knippert wanneer de HUB in de koppelingsmodus staat.

Nadat de koppeling is voltooid, stopt het lampje met knipperen en werkt het in de normale modus.

De koppelingsmodus gaat een vastgestelde periode door. Het lampje kan blijven knipperen nadat de koppeling is voltooid.

Dit lampje gaat aan wanneer de HUB wordt aangesloten op een draadloze router met een Ethernet-kabel.

Dit lampje gaat branden wanneer de HUB ingesteld op de herhaal-modus wordt gebruikt om de Wi-Fi-dekking te vergroten in een netwerk waar een andere HUB en een draadloze router in zitten.


Als u problemen hebt met het verbinden van de HUB en de Wireless Audio - Multiroom omdat het signaal is geblokkeerd of als de afstand tussen die twee te groot is, voeg dan een nieuwe HUB toe in de repeatermodus om de draadloze dekking te vergroten.

Connecting the HUB to Your Wi-Fi Network

English

- A Wireless Audio - Multiroom can be used anywhere your Wi-Fi signal reaches.


1 Connect the HUB to your router or modem using a LAN cable.

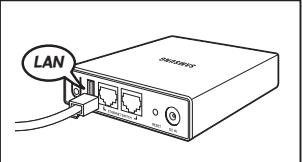

Français

- L'Enceinte audio sans fil Multiroom peut être utilisée à n'importe quel emplacement recevant votre signal Wi-Fi.


1 Connectez le HUB au routeur ou au modem à l'aide d'un câble LAN.

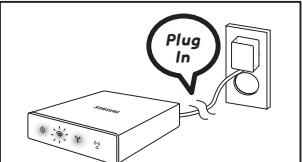

Deutsch

- Das Audio-Funkübertragungssystem - Multiroom kann überall innerhalb der Reichweite des Wi-Fi-Signals genutzt werden.


1 Schließen Sie den HUB mithilfe eines LAN-Kabels an Ihren Router oder Ihr Modem an.

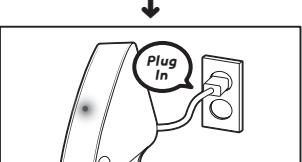

Nederlands

- De Wireless Audio - Multiroom kan overal worden gebruikt waar het Wi-Fi-signal te ontvangen is.

1 Sluit de HUB met een LAN-kabel aan op uw router of modem.

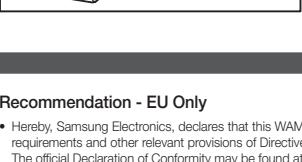

2 Plug the included power cable into the back of the HUB, and then plug the power cord into a wall socket.

2 Branchez le câble d'alimentation fourni à l'arrière du HUB, puis branchez le cordon d'alimentation dans une prise murale.

2 Schließen Sie das Netzkabel auf der Rückseite des HUB und anschließend an die Steckdose an.

3 After the Pairing Indicator on the HUB lights, plug in the Wireless Audio - Multiroom. (For more information, see the User Manual.)

3 Eine fois que l'indicateur d'appairage s'allume sur le HUB, branchez l'Enceinte audio sans fil Multiroom. (Pour plus d'informations, reportez-vous au manuel d'utilisation.)

3 Wenn die Anzeigeleuchte für die Verbindungsherstellung am HUB aufleuchtet, das Audio-Funkübertragungssystem - Multiroom an die Steckdose anschließen.

This equipment may be operated in all EU countries.

(Für weitere Informationen entnehmen Sie bitte Ihrer Bedienungsanleitung.)

3 Nachdem der Koppelungsindikator auf dem HUB ist gaan branden, steekt u de stekker van de Wireless Audio - Multiroom in het stopcontact. (Raadpleg de gebruiksaanwijzing voor meer informatie.)

This equipment may only be used indoors.

Cet appareil ne peut être utilisé qu'en intérieur.

3 Nadat de koppelingsindicator op de HUB is gaan branden, steek u de stekker van de Wireless Audio - Multiroom in het stopcontact. (Raadpleg de gebruiksaanwijzing voor meer informatie.)

Adding a HUB

English

An Wireless Audio - Multiroom and a HUB may not pair successfully if the Wireless Audio - Multiroom and a HUB are too far apart or are on different floors.

In such cases, you can link two HUBs together by setting the second HUB to Repeater mode. The additional HUB amplifies the signal and lets you pair the Wireless Audio - Multiroom to the closest HUB.

1 Set the HUB that is connected to the wireless router to Pairing mode by pressing its **SPK ADD** button for 1 second.

2 Réglez le HUB connecté au routeur sans fil en mode d'appairement et appuyez sur le bouton **SPK ADD** pendant 1 seconde.

3 Branchez le nouveau HUB que vous utilisez en tant que multiplicateur, puis appuyez sur le bouton **SPK ADD** pendant 10 secondes.

4 Les indicateurs DEL du HUB qui vient d'être ajouté s'allument et s'éteignent et le HUB commence en mode de répétition.

5 Once the connection between the two HUBs has been established, the added HUB's () indicator stops blinking.

6 If your smart device is not connected to the wireless router with a Wi-Fi connection, the Wireless Audio - Multiroom will not appear on the Samsung Multiroom app.

7 Place the HUB that is in Repeater mode in an appropriate location between the Wireless Audio - Multiroom and the HUB that is connected to the wireless router.

8 Placez le HUB qui est en mode Répétition dans un emplacement approprié entre l'Enceinte audio sans fil Multiroom et le HUB qui est connecté au routeur sans fil.

9 You can set only one HUB to Repeater mode.

10 Nachdem die Verbindung zwischen den beiden HUBs hergestellt ist, hört die Anzeigeleuchte des hinzugefügten HUBs () auf zu blinken.

11 Wenn Ihr Smart-App nicht über eine Wi-Fi-Verbindung mit dem Wi-Fi-Router verbunden ist, erscheint das Audio-Funkübertragungssystem - Multiroom nicht in der Samsung Multiroom App.

12 Stellen Sie den HUB im Repeater Modus an einem geeigneten Ort zwischen dem Audio-Funkübertragungssystem - Multiroom und dem HUB auf, der mit dem Wi-Fi-Router verbunden ist.

13 Es kann nur ein HUB in den Repeater Modus geschaltet werden.

Français

L'appairement entre l'Enceinte audio sans fil Multiroom et un HUB peut échouer si l'Enceinte audio sans fil Multiroom et l'HUB sont trop éloignés l'un de l'autre ou sur différents étages.

Dans ces cas, vous pouvez lier deux HUB en réglant le deuxième HUB sur le mode Répétition. Le HUB supplémentaire amplifie le signal et vous permet d'appairer l'Enceinte audio sans fil Multiroom avec le HUB le plus proche.

1 Réglez le HUB connecté au routeur sans fil en mode d'appairement et appuyez sur le bouton **SPK ADD** pendant 1 seconde.

2 Branchez le nouveau HUB que vous utilisez en tant que multiplicateur, puis appuyez sur le bouton **SPK ADD** pendant 10 secondes.

3 Les indicateurs DEL du HUB qui vient d'être ajouté s'allument et s'éteignent et le HUB commence en mode de répétition.

4 Une fois la connexion entre les deux HUB établie, l'indicateur () du HUB ajouté cesse de clignoter.

5 Si votre dispositif intelligent n'est pas relié au routeur sans fil à l'aide d'une connexion Wi-Fi, l'Enceinte audio sans fil Multiroom n'apparaît pas sur l'application Samsung Multiroom.

6 Placez le HUB qui est en mode Répétition dans un emplacement approprié entre l'Enceinte audio sans fil Multiroom et le HUB qui est connecté au routeur sans fil.


7 Vous ne pouvez régler qu'un seul HUB en mode de répétition.

8 Wenn Ihr Smart-App nicht über eine Wi-Fi-Verbindung mit dem Wi-Fi-Router verbunden ist, erscheint das Audio-Funkübertragungssystem - Multiroom nicht in der Samsung Multiroom App.

9 Stellen Sie den HUB im Repeater Modus an einem geeigneten Ort zwischen dem Audio-Funkübertragungssystem - Multiroom und dem HUB auf, der mit dem Wi-Fi-Router verbunden ist.

10 Es kann nur ein HUB

Regulatory Compliance Statements

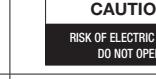

The lighting flash and arrowhead within the triangle is a warning sign alerting you to dangerous voltage inside the product.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK), NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Warning

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

- Do not expose this apparatus to dripping or splashing.

- Do not put objects filled with liquids, such as vases, on the apparatus.

- To turn off the apparatus completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.

- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put an object filled with liquid, such as a vase, on the apparatus.

- To turn off the apparatus completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

Wiring

Main Power Supply Plug (UK Only)

IMPORTANT NOTICE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS 1362 of the same rating must be used. Never cut off the fuse from the plug and replace it with one of the same colour as the fuse fitted in the plug. Replacement fuses are available from your dealer. If the fitted plug is not suitable for the power outlets in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or socket. If the power plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits the apparatus.

Only use attachments recommended by the manufacturer.

Use only with the cert. stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

When a car is used, use caution when moving the car/craft/apparatus combination to avoid injury from tip-over.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer to service to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug has been spilled or damaged; the power cord or plug has been cut or pulled, the remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket as there is a risk of shock hazard from the bare flexible cord. Never attempt to insert bare wires directly into a mains socket.

A plug and fuse must be used at all times.

IMPORTANT NOTICE

The wires in the mains lead are coloured in accordance with the following code:- BLUE = NEUTRAL BROWN = LIVE As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:- The wire coded BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the products, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

WARNING : DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions below.

Keep these operating instructions handy for future reference.

1 Read these instructions.

2 Keep these instructions.

3 Heed all warnings.

4 Follow all instructions.

5 Do not use this apparatus near water.

6 Clean only with a dry cloth.

7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including A/C receivers) that produce heat.

9 Do not defeat the safety purpose of the ground or polarized plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits the apparatus.

11 Only use attachments recommended by the manufacturer.

12 Use only with the cert. stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

13 When moving the product, turn off the power and disconnect all cords (include power cord) from the unit.

A damaged cord may cause a fire or electric shock.

14 Testing or use of liquid or aerosol sprays may cause the product to malfunction and lead to severe vibration or impact which can also cause the product to malfunction and lead to severe vibration or impact.

15 Insert the power cord into an outlet with two blades and a third prong. A grounding type plug has two blades and a third prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

16 Clean only with a dry cloth.

17 Do not use this apparatus near water.

18 Do not expose this apparatus to dripping or splashing.

19 Do not expose this apparatus to temperatures outside the range of 5°C to 40°C.

20 Do not expose this apparatus to direct sunlight or other heat sources.

21 Do not expose this apparatus to moisture or steam.

22 Do not expose this apparatus to rain or water.

23 Do not expose this apparatus to extremely low temperatures.

24 Do not expose this apparatus to extremely high temperatures.

25 Do not expose this apparatus to high humidity or moisture.

26 Do not expose this apparatus to high pressure.

27 Do not expose this apparatus to sudden changes in temperature.

28 Do not expose this apparatus to high altitude.

29 Do not expose this apparatus to direct sunlight or other heat sources.

30 Do not expose this apparatus to high pressure.

31 Do not expose this apparatus to high pressure.

32 Do not expose this apparatus to high pressure.

33 Do not expose this apparatus to high pressure.

34 Do not expose this apparatus to high pressure.

35 Do not expose this apparatus to high pressure.

36 Do not expose this apparatus to high pressure.

37 Do not expose this apparatus to high pressure.

38 Do not expose this apparatus to high pressure.

39 Do not expose this apparatus to high pressure.

40 Do not expose this apparatus to high pressure.

41 Do not expose this apparatus to high pressure.

42 Do not expose this apparatus to high pressure.

43 Do not expose this apparatus to high pressure.

44 Do not expose this apparatus to high pressure.

45 Do not expose this apparatus to high pressure.

46 Do not expose this apparatus to high pressure.

47 Do not expose this apparatus to high pressure.

48 Do not expose this apparatus to high pressure.

49 Do not expose this apparatus to high pressure.

50 Do not expose this apparatus to high pressure.

51 Do not expose this apparatus to high pressure.

52 Do not expose this apparatus to high pressure.

53 Do not expose this apparatus to high pressure.

54 Do not expose this apparatus to high pressure.

55 Do not expose this apparatus to high pressure.

56 Do not expose this apparatus to high pressure.

57 Do not expose this apparatus to high pressure.

58 Do not expose this apparatus to high pressure.

59 Do not expose this apparatus to high pressure.

60 Do not expose this apparatus to high pressure.

61 Do not expose this apparatus to high pressure.

62 Do not expose this apparatus to high pressure.

63 Do not expose this apparatus to high pressure.

64 Do not expose this apparatus to high pressure.

65 Do not expose this apparatus to high pressure.

66 Do not expose this apparatus to high pressure.

67 Do not expose this apparatus to high pressure.

68 Do not expose this apparatus to high pressure.

69 Do not expose this apparatus to high pressure.

70 Do not expose this apparatus to high pressure.

71 Do not expose this apparatus to high pressure.

72 Do not expose this apparatus to high pressure.

73 Do not expose this apparatus to high pressure.

74 Do not expose this apparatus to high pressure.

75 Do not expose this apparatus to high pressure.

76 Do not expose this apparatus to high pressure.

77 Do not expose this apparatus to high pressure.

78 Do not expose this apparatus to high pressure.

79 Do not expose this apparatus to high pressure.

80 Do not expose this apparatus to high pressure.

81 Do not expose this apparatus to high pressure.

82 Do not expose this apparatus to high pressure.

83 Do not expose this apparatus to high pressure.

84 Do not expose this apparatus to high pressure.

85 Do not expose this apparatus to high pressure.

86 Do not expose this apparatus to high pressure.

87 Do not expose this apparatus to high pressure.

88 Do not expose this apparatus to high pressure.

89 Do not expose this apparatus to high pressure.

90 Do not expose this apparatus to high pressure.

91 Do not expose this apparatus to high pressure.

92 Do not expose this apparatus to high pressure.

93 Do not expose this apparatus to high pressure.

94 Do not expose this apparatus to high pressure.

95 Do not expose this apparatus to high pressure.

96 Do not expose this apparatus to high pressure.

97 Do not expose this apparatus to high pressure.

98 Do not expose this apparatus to high pressure.

99 Do not expose this apparatus to high pressure.

100 Do not expose this apparatus to high pressure.

101 Do not expose this apparatus to high pressure.

102 Do not expose this apparatus to high pressure.

103 Do not expose this apparatus to high pressure.

104 Do not expose this apparatus to high pressure.

105 Do not expose this apparatus to high pressure.

106 Do not expose this apparatus to high pressure.

107 Do not expose this apparatus to high pressure.

108 Do not expose this apparatus to high pressure.

109 Do not expose this apparatus to high pressure.

110 Do not expose this apparatus to high pressure.

111 Do not expose this apparatus to high pressure.

112 Do not expose this apparatus to high pressure.

113 Do not expose this apparatus to high pressure.

114 Do not expose this apparatus to high pressure.