

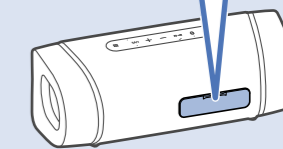
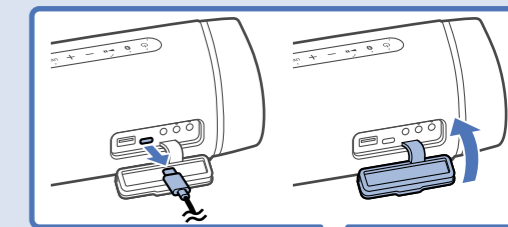
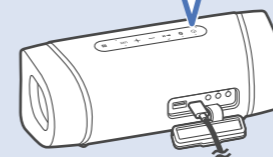
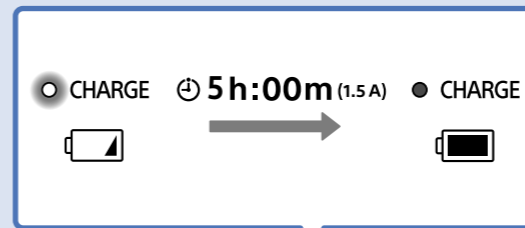
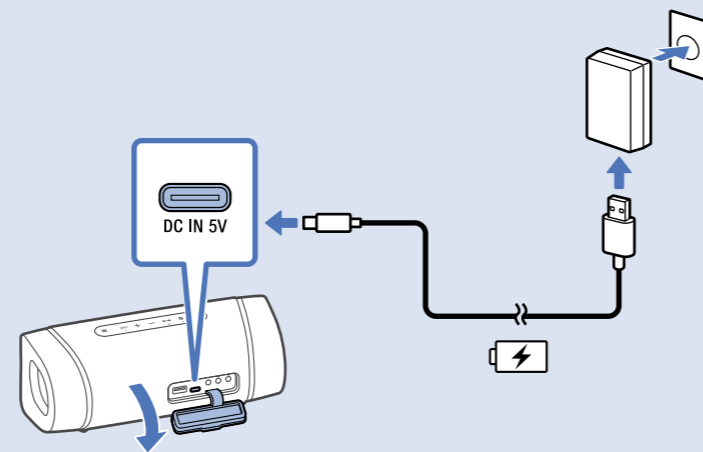
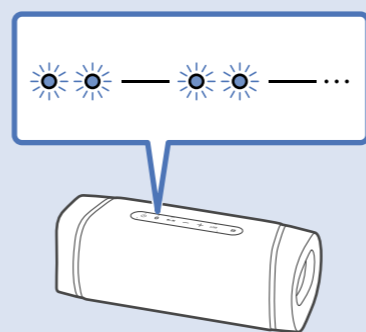


1

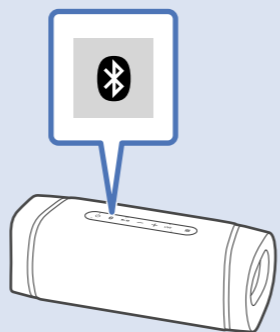


2







SRS-XB33

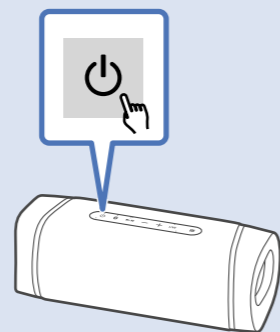


Android™ iPhone

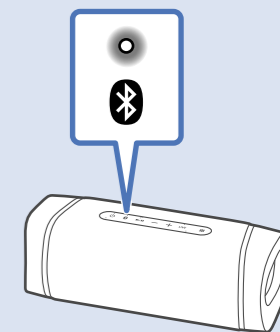


3

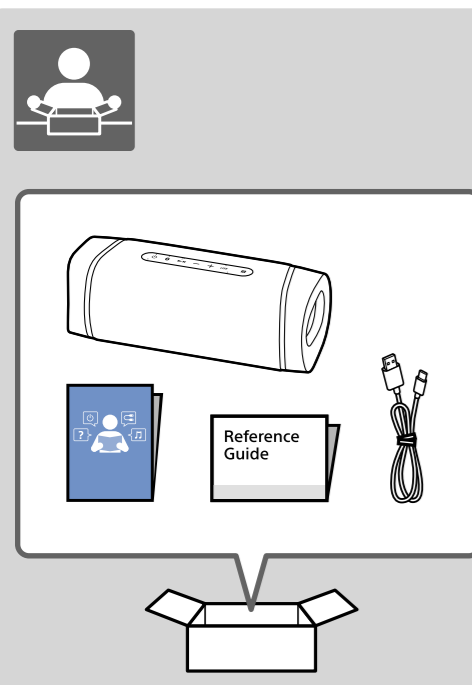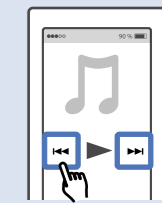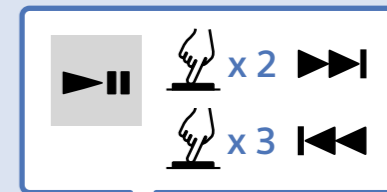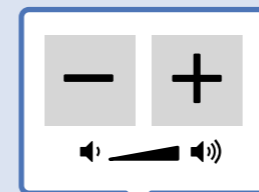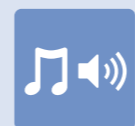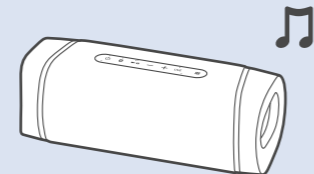


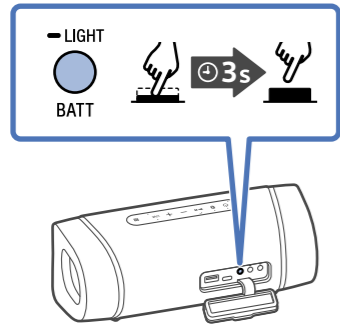








ON

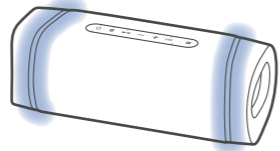

OFF

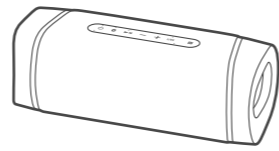


Android

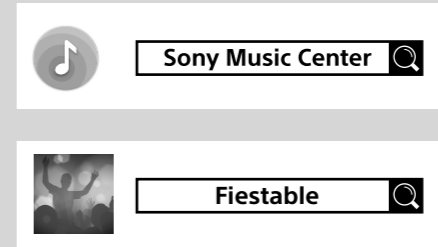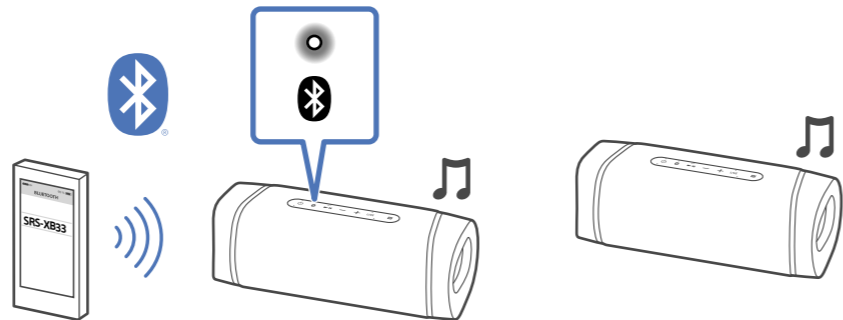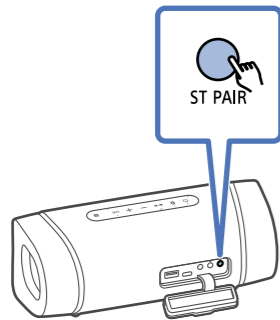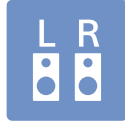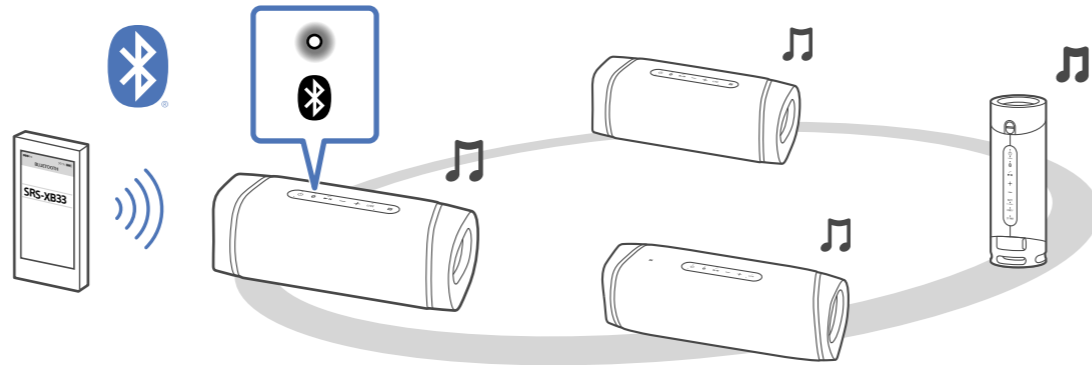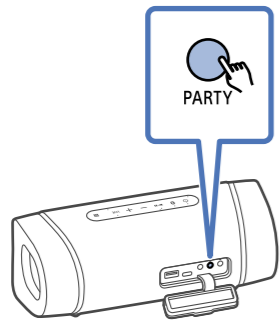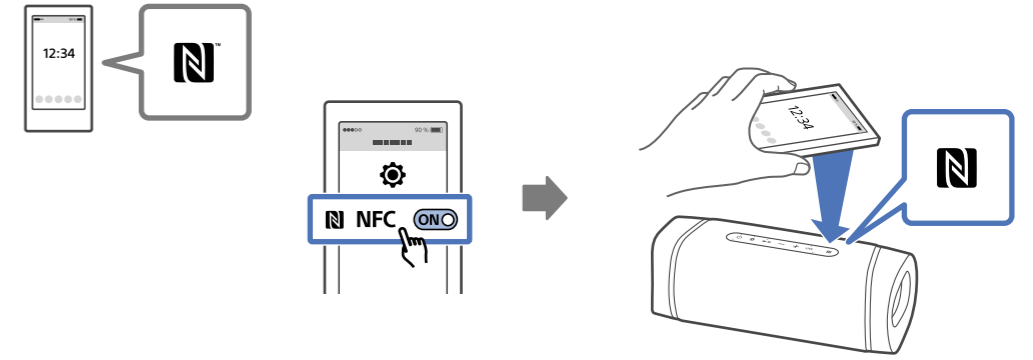

Android / iPhone



<https://www.sony.net/smcapp/>

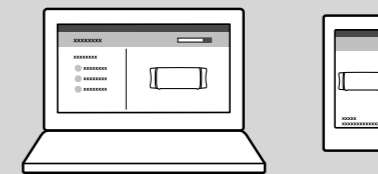

https://rd1.sony.net/help/speaker/srs-xb33/h_zz/