

 


THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register




Before using the appliance carefully read the Safety Instruction.

PRODUCT DESCRIPTION

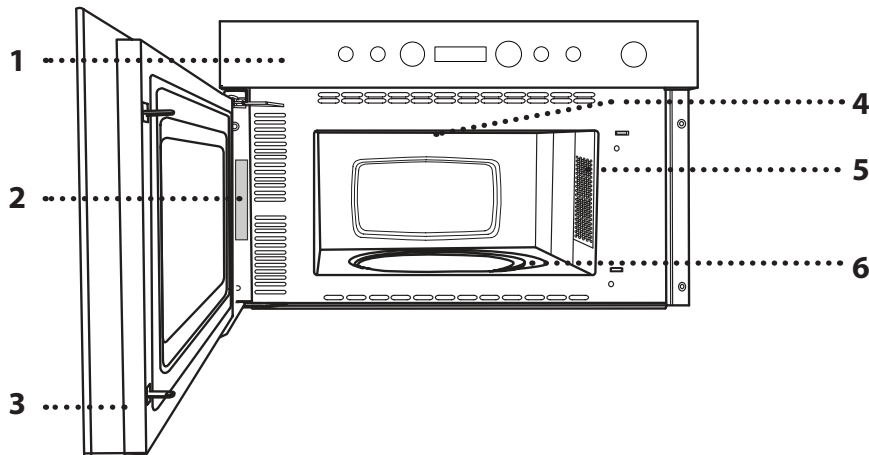

1. Control panel
2. Identification plate
(do not remove)
3. Door
4. Light
5. Turntable

 CONTROL PANEL DESCRIPTION

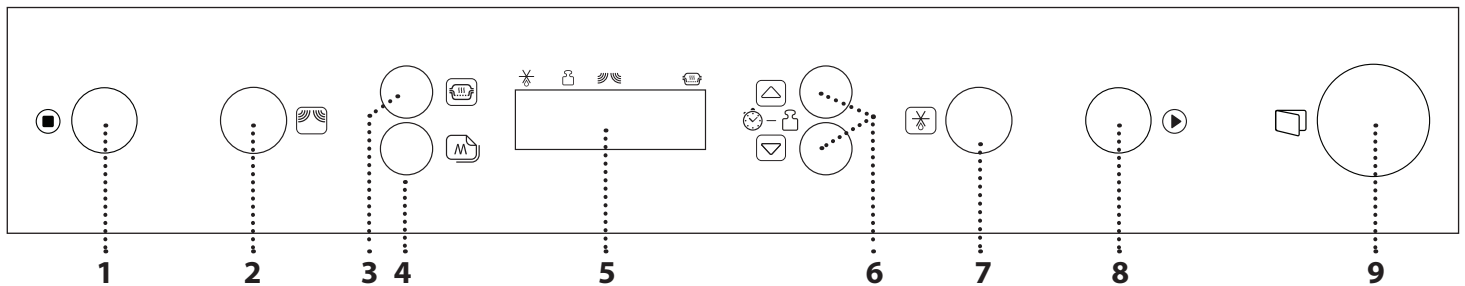

1. STOP

For stopping a function or an audible signal, cancelling the settings and switching off the oven.

2. MICROWAVE FUNCTION/POWER

For selecting the microwave function and setting the required power level.

3. STEAM FUNCTION

4. MEMORY

5. DISPLAY

6. + / - BUTTONS

For adjusting the settings of a function (e.g. length, weight).

7. JET DEFROST FUNCTION

 
8. START

For starting a function.

9. DOOR OPENING BUTTON

ACCESSORIES


TURNTABLE



Placed on its support, the glass turntable can be used with all cooking methods.

The turntable must always be used as a base for other containers or accessories.

 
TURNTABLE SUPPORT

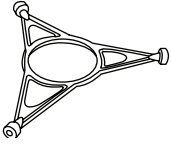

Only use the support for the glass turntable.

Do not rest other accessories on the support.

 STEAMER

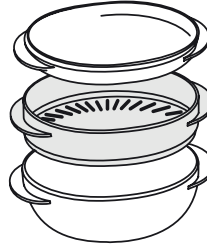

.....1 To steam foods such as fish or vegetables, place these in the basket (2) and pour drinking water (100 ml) into the bottom of the steamer (3) to achieve the right amount of steam.

.....2 To boil foods such as potatoes, pasta, rice or cereals, place

these directly on the bottom of the steamer (the basket is not required) and add an appropriate amount of drinking water for the amount you are cooking.

For best results, cover the steamer with the lid (1) provided.

Always place the steamer on the glass turntable and only use it with the appropriate cooking functions, or with microwave function.

The steamer bottom has been designed also to be used in combination with the special steam clean function.

Other accessories that are not supplied can be purchased separately from the After-sales Service.

The number and the type of accessories may vary depending on which model is purchased.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS



MICROWAVE

For quickly cooking and reheating food or drinks.

POWER (W)	RECOMMENDED FOR
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.
160 W	Defrosting frozen food or softening butter and cheese.
0 W	When using the minuteminder only.



JET DEFROST

For quickly defrosting food such as meat, poultry and fish weighing between 100 g and 2 kg. Food should be placed directly onto the glass turntable. Turn the food when prompted.



STEAM

For steam-cooking foods such as vegetables or fish, using the steamer provided. Distribute evenly the food into the steamer basket and pour drinking water (100 ml) into the bottom of the steamer. The oven automatically calculates the settings required to achieve perfect results. During the initial part of the cooking, microwaves generate steam, bringing the water into the bottom of the steamer to boil.

FOOD	WEIGHT (g)
ROOTS & TUBERS	150 - 500
VEGETABLES	
VEGETABLES-FROZEN	
FISH FILLETS	

Required accessories: Steamer



MEMORY

The memory function provides you with an easy way to quickly recall a preferred setting.

The principle of the memory function is to store whatever setting that is currently displayed.

- Press the memo button and then press the start button.

How to store a setting:

- Select any function and make the necessary setting.
- Press and keep the memo button for 3 seconds until an acoustic signal is heard: the setting is now stored. You may reprogram the memory as many times as you wish.

DAILY USE

. SELECT A FUNCTION

Simply press the button for the function you require to select it.

. SET THE LENGTH



After selecting the function you require, use or to set the length for it to run.

The time can be changed during cooking by pressing or or by increasing the length for 30 seconds each time by pressing .

. SET THE POWER OF THE MICROWAVE



Press as many times as required to select the power level for the microwave.

Please note: You can also change this setting during cooking by pressing .

. JET DEFROST



Press , then use or to set the weight of the food. During defrosting, the function will pause briefly to allow

you to turn the food. Once the operation is complete, close the door and press .

. ACTIVATE THE FUNCTION

Once you have applied the settings you require, press to activate the function.

Every time the button is pressed again, the cooking time will be increased by a further 30 seconds.

You can press at any time to stop the function that is currently active.

. JET START

When the oven is switched off, press to activate cooking with the microwave function set at full power (750 W) for 30 seconds.

. PAUSE

To pause an active function, for example to stir or turn the food, simply open the door.

The setting will be maintained for 10 minutes.

To start it up again, close the door and press .

A beep will signal once or twice a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.

Please note: The oven will only hold the setting for 60 seconds if the door is opened and then closed after the cooking is finished.

. COOLING DOWN

When a function is finished, the oven may carry out a cooling procedure the oven switches off automatically.

. SAFETY LOCK



This function is automatically activated to prevent the oven from being switched on accidentally. Open and close the door, then press to start the function.

. SET THE TIME OF THE DAY



Press until the two digits for the hour (on the left) starting flashing.

Use or to set the correct hour and press to confirm: The minutes will flash on the display. Use or to set the minutes and press to confirm.

Please note: You may need to set the time again following lengthy power outages.

. MINUTEMINDER

The display can be used as a timer. To activate the function and set the length of time you require, use or . Press to set the power to 0 W, then press to activate the countdown.

Please note: The timer does not activate any of the cooking cycles. To stop the timer at any time, press .

CLEANING

Make sure that the appliance has cooled down before carrying out any maintenance or cleaning.

Never use steam cleaning equipment.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue.

ACCESSORIES

All accessories are dishwasher safe. For stubborn dirt, rub gently with a cloth.

TROUBLESHOOTING

Problem	Possible cause	Solution
The oven is not working.	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The display is showing "Err".	Software fault.	Contact your nearest After-sales Service Centre and state the letter or number that follows "Err".



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

