

MANUAL / HANDLEIDING



**PORTABLE
RECHARGEABLE BLENDER**

BLENDIN

FOCUS ON THE TECHNOLOGY OF
BLENDING AND JUICING



PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE MACHINE. PLEASE KEEP THE MANUAL SAFE FOR FUTURE REFERENCE.



PLEASE FOLLOW THE IMPORTANT SAFETY WARNINGS BELOW. FAILURE TO FOLLOW THE SAFETY WARNINGS MAY RESULT IN INJURY AND/OR HARM TO YOU AND TO OTHER PEOPLE. ALWAYS FOLLOW THE INFORMATION IN THIS INSTRUCTION MANUAL.



DO NOT REMOVE THE JUG COVER WHEN THE MACHINE IS WORKING. NEVER TOUCH THE ROTATING PARTS OR BLADES AT ANYTIME.



IF THE MACHINE IS BLOCKED BY FOOD WHEN BLENDING, TURN OFF THE MACHINE IMMEDIATELY AND CHECK TO SEE IF ANYTHING HARD LIKE SEEDS OR STONES ARE CAUSING THE BLOCKAGE. REMOVE AND THEN RESTART THE MACHINE. ALWAYS TURN OFF THE MACHINE BEFORE CHECKING.



DO NOT ALLOW CHILDREN TO OPERATE THIS MACHINE. STORE THE MACHINE OUT OF REACH OF CHILDREN.



CONSUME THE FOOD/DRINK IMMEDIATELY AFTER BLENDING. DO NOT STORE FOR MORE THAN 6 HOURS AFTER BLENDING TO PREVENT ROTTING FOOD AND DRINK.



AVOID BLENDING WITH HOT LIQUIDS. DUE TO THE PRESSURE GENERATED BY THE STEAM IN AN ENCLOSED SPACE CRACKS CAN OCCUR. PLEASE LET HOT LIQUIDS COOL DOWN FIRST.



BE CAREFUL WHEN USING WATER, FOR EXAMPLE WHEN CLEANING THE BLENDER. IT IS AN ELECTRICAL APPLIANCE AND TOO MUCH WATER CAN CAUSE A SHORT CUT.



AFTER RECEIVING THE BLENDER. PLEASE FULLY CHARGE THE BATTERY BEFORE USING IT FOR THE FIRST TIME SO THAT IT CAN FUNCTION AT FULL POWER IMMEDIATELY.



DO NOT CHARGE THE BLENDER OVERNIGHT. THIS IS NOT GOOD FOR THE BATTERY.



THE VOLUME OF THE FOOD CAN'T BE OVER 2/3 OF THE JUG. MAKE SURE THE LID IS FULLY CLOSED BEFORE OPERATING THE MACHINE.

1. PARTS



2. OPERATION



3. CHARGING



4. FAULT



PRODUCT NAME

PORTABLE RECHARGING BLENDER

MODEL

GN-A04 VOLUME: 380 ML

BATTERY SPECIFICATION

1200 MAH X 2

RATED CURRENT / VOLTAGE


17A / 7.4V

MOTOR RATED POWER

126 W

MOTOR ROATING SPEED

16500 RMP/MIN ±15 %

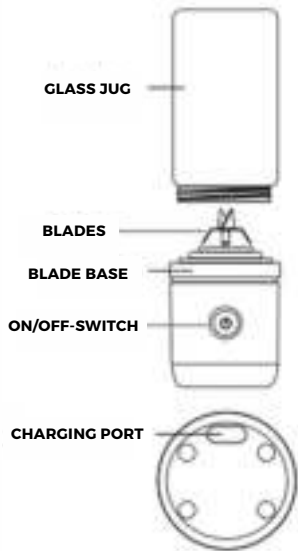


INDICATING LIGHT EXPLANATION

- **BLENDED FUNCTION:** PRESS THE SWITCH AND HOLD FOR 2 SECONDS. THE BLENDER WILL START AUTOMATICALLY AND THE WHITE LIGHT WILL BE TURNED ON. AFTER 45 SECONDS THE MACHINE WILL STOP AUTOMATICALLY.
- **CRUSH ICE FUNCTION:** ADD SOME FRUIT & ICE & WATER AND PRESS TWICE QUICKLY. THE BLENDER WILL STARTED AUTOMATICALLY AND THE WHITE LIGHT WILL BE TURNED ON. THEN SHAKE THE BLENDER AND PRESS STOP IF YOU SEE THE FRUIT JUICE IS OK.
- **WHEN CONNECTED TO A USB CHARGING LEAD, THE RED LIGHT WILL BE ON. WHEN THE MACHINE IS FULLY CHARGED AND READY, THE WHITE LIGHT WILL BE ON.**
- **WHEN THE JUG IS SEPERATED FROM THE BASE OR NOT INSTALLED CORRECTLY, THE BLENDER WILL NOT WORK AND THE RED LIGHT WILL FLASH 5 TIMES (INDICATING THAT IT WILL NOT WORK).**
- **WHEN CHARGING, THE MACHINE WILL NOT WORK NO MATTER HOW MANY YOU PRESS THE SWITCH BUTTON.**
- **IF ANY FOOD OVERLOADS OR BLOCKS THE BLENDER FROM WORKING DURING OPERATION. IT WILL STOP AUTOMATICALLY AND THE RED AND WHITE LIGHTS WILL FLASH ALTERNATELY.**
- **WHEN THE INGREDIENTS AND LIQUID LINE IS BELOW THE HEIGHT OF THE BLADES THE MACHINE WILL STOP AFTER 5 SECONDS FOR PROTECTION AND THE RED LIGHT FLASHES 3 TIMES.**
- **THE RED LIGHT WILL FLASH 10 TIMES WHEN THE BATTERY HAS NO POWER.**

2 OPERATION


LANGUAGE **ENG**

1

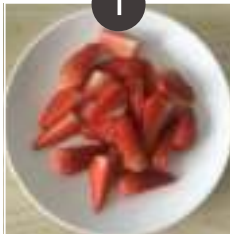

CUT FOOD TO SEVERAL
PIECES, REMOVE SKIN
AND NUT (AROUND 2 CM)

2

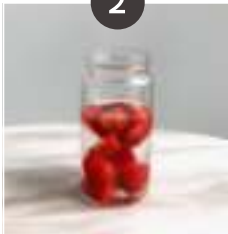

POUR WATER AND MILK
INTO THE CONTAINER

3



INCLINE THE MACHINE TO
THE ANGLE OF 45° AND
TURN ON THE MACHINE

4



TO HELP THE FOOD
BLEND, SHAKE 5-8 TIMES
DURING THE BLEND OF
AROUND 30-40 SECONDS

EASY INSTALLATION

PLEASE CHECK THAT BOTH THE LID AND THE BASE HAVE THE SILICON RINGS IN PLACE;
PUT THE JUG ON THE MAIN BASE, AND THEN TURN CLOCKWISE FULLY TO LOCK;
PRESS THE SWITCH BUTTON TO OPERATE WITH WHITE LIGHT

**BATTERY CAPACITY IS 2400MAH,
PLEASE USE USB LEAD FOR CHARGING CONNECTED
TO AN ADAPTER (1A OR BELOW 1A), POWER BANK,
USB-PORT OF COMPUTER OR CAR CHARGING PORT**



- 1** PLEASE INSERT "MICRO B SIDE" OF USB (SMALL PORT) INTO THE CHARGING PORT.
- 2** PLEASE INSERT "USB SIDE" (BIGGER SIDE) INTO ADAPTER, POWER BANK, USB-PORT OF COMPUTER AND ETC.

MORE INFORMATION



JUST SCAN DE BARCODE ABOVE WITH YOUR CAMERA APP ON YOUR PHONE, AND GET MORE MORE INFORMATION ABOUT USING THE BLENDER

NO	FAULT PHENOMENON	FAULT ANALYSIS	SOLUTION
1.	THE RED LIGHT FLASHES 5 TIMES BUT THE MACHINE DOESN'T WORK	THE CONTAINER IS NOT CORRECTLY INSTALLED ON THE BASE	PLEASE RE-INSTALL AGAIN
2.	THE MACHINE DOESN'T WORK AND THE RED LIGHT IS FLASHES 10 TIMES	BATTERY QUANTITY IS NOT ENOUGH OR NO POWER	PLEASE RE-INSTALL AGAIN
3.	THE MACHINE STOPS DURING OPERATION	TOO LITTLE FOOD OR TOO MUCH.EITHER WILL CAUSE THE MACHINE TO STOP FOR PROTECTION	REDUCE SOME FOOD AND THEN START AGAIN
4.	THE RED AND WHITE LIGHT WILL FLASH 10 TIMES DURING OPERATION	THE MOTOR HAS LOCKED	IF THERE ISN'T ANY FOOD BLOCKAGE, PLEASE RE-START AGAIN
5.	LEAKING WATER	THE SILICONE PART IS NOT INSTALLED CORRECTLY	PLEASE RE-INSTALL SILICONE PART
6.	THERE IS SOME SMOKE WHEN USING	LONG TIME USING, THE MACHINE IS OVER HEATED AND PROTECTED AUTOMATICALLY	PLEASE COOL DOWN THE MACHINE FOR 30-60 MINS AND THEN START AGAIN

WARM REMIND

- 1 THERE WILL BE AN ERROR IF YOUR GLASS JUG IS DAMAGED.PLEASE STOP THE MACHINE IMMEDIATELY AND UNSCREW THE JUG IF THERE IS LEAKING,LOOSE SCREWS OR MALFUNCTION.
- 2 IT IS BEST TO CHARGE THE MACHINE FOR BETWEEN 3-5 HOURS. DO NOT CHARGE THE BLENDER OVERNIGHT. THIS IS NOT GOOD FOR THE BATTERY.
- 3 THE MACHINE SHOULD ONLY BE USED WHEN WATER,MILK OR OTHER LIQUIDS ARE INSIDE THE CONTAINER AT A HEIGHT ABOVE AND COVERING THE BLADES.IF FOOD DOES NOT BLEND,ADD MORE LIQUID.
- 4 DO NOT WASH THE BASE OF THE MACHINE WITH WATER.DO NOT SUBMERGE THE BASE IN WATER.IF WATER IS ALLOWED INTO THE SWITCH OR CHARGING PORT,THE MACHINE WILL BE DAMAGED.



LEES DEZE HANDLEIDING AANDACHTIG DOOR VOORDAT U DE MACHINE GEBRUIKT.
BEWAAR DE HANDLEIDING OP EEN VEILIGE PLAATS VOOR TOEKOMSTIG GEBRUIK.



VOLG DE BELANGRIJKE VEILIGHEIDSWAARSCHUWINGEN HIERONDER. HET NIET OPVOLGEN
VAN DE VEILIGHEIDSWAARSCHUWINGEN KAN LEIDEN TOT LETSEL EN/OF SCHADE AAN U EN
AAN ANDERE MENSEN. VOLG ALTIJD DE INFORMATIE IN DEZE GEBRUIKSAANWIJZING.



VERWIJDER DE DEKSEL VAN DE KAN NIET WANNEER DE MACHINE IN WERKING IS. RAAK
NOOIT DE DRAAIENDE DELEN OF MESSEN AAN.



ALS DE MACHINE TIJDENS HET MIXEN WORDT GEBLOKKEERD DOOR VOEDSEL, ZET U DE
MACHINE ONMIDDELLIJK UIT EN CONTROLEERT U OF IETS HARDS, ZOALS ZADEN OF STENEN,
DE BLOKKERING VEROORZAAKT. VERWIJDER DE MACHINE EN START DEZE OPNIEUW OP.
ZET DE MACHINE ALTIJD UIT VOORDAT U GAAT CONTROLEREN.



LAAT KINDEREN DEZE MACHINE NIET BEDIENEN. BERG DE MACHINE BUITEN HET BEREIK
VAN KINDEREN OP.



CONSUMEER HET ETEN/DRINKEN ONMIDDELLIJK NA HET MENGEN. NA HET MENGEN NIET
LANGER DAN 6 UUR BEWAREN OM ROTTEND ETEN EN DRINKEN TE VOORKOMEN.



VERMIJD VERMENGING MET HETE VLOEISTOFFEN. DOOR DE DOOR DE STOOM OPGEWEKTE DRUK KUNNEN IN EEN AFGESLOTEN RUIMTE SCHEUREN ONTSTAAN. LAAT HETE VLOEISTOFFEN EERST AFKOELEN.



WEES VOORZICHTIG BIJ HET GEBRUIK VAN WATER, BIJVOORBEELD BIJ HET SCHOONMAKEN VAN DE BLENDER. HET IS EEN ELEKTRISCH APPARAAT EN TE VEEL WATER KAN KORTSLUITING VEROOZAKEN.



NA ONTVANGST VAN DE BLENDER. LAAD DE BATTERIJ VOLLEDIG OP VOORDAT U DEZE VOOR DE EERSTE KEER GEBRUIKT, ZODAT DEZE ONMIDDELIJK OP VOL VERMOGEN KAN WERKEN.



LAAD DE BLENDER NIET 'S NACHTS OP. DIT IS NIET GOED VOOR DE BATTERIJ.



HET VOLUME VAN HET VOEDSEL MAG NIET MEER DAN $\frac{2}{3}$ VAN DE KAN ZIJN. ZORG ERVOOR DAT HET DEKSEL VOLLEDIG GESLOTEN IS VOORDAT U DE MACHINE GEBRUIKT.

1. ONDERDELEN



2. WERKING



3. LADEN



4. FOUT



PRODUCT NAAM

DRAAGBARE OPLAADBARE BLENDER

MODEL

GN-A04 VOLUME; 380 ML

BATTERIJ SPECIFICATIE

1200 MAH X 2

NOMINALE STROOM / SPANNING


17A / 7.4V

MOTOR VERMOGEN

126 W

MOTOR SNELHEID


16500 RMP/MIN ±15 %

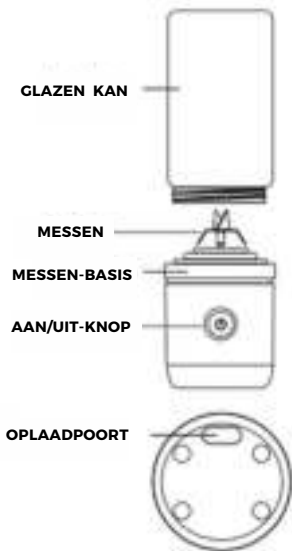

AANDUIDING LICHT UITLEG


- MINGFUNCTIE: DRUK OP DE SCHAKELAAR EN HOUD DEZE 2 SECONDEN INGEDRUKT. DE BLENDER START AUTOMATISCH EN HET WITTE LAMPJE BRANDT. NA 45 SECONDEN STOPT DE MACHINE AUTOMATISCH.
- CRUSH ICE-FUNCTIE: VOEG WAT FRUIT EN IJS EN WATER TOE EN DRUK TWEE KEER SNEL. DE BLENDER START AUTOMATISCH EN HET WITTE LAMPJE BRANDT. SCHUD DE BLENDER EN DRUK OP STOP ALS JE ZIET DAT HET VRUCHTENSAP IN ORDE IS.
- BIJ AANSLUITING OP EEN USB-OPLAADKABEL BRANDT HET RODE LAMPJE. WANNEER DE MACHINE VOLLEDIG IS OPGELADEN EN GEREED IS, GAAT HET WITTE LAMPJE BRANDEN.
- WANNEER DE KAN VAN DE BASIS IS GESCHIEDEN OF NIET CORRECT IS GEÏNSTALLEERD, ZAL DE BLENDER NIET WERKEN EN ZAL HET RODE LAMPJE 5 KEER KNIPPEREN (WAT AANGEEFT DAT HET NIET ZAL WERKEN).
- TIJDENS HET OPLADEN WERKT DE MACHINE NIET, ONGEACHT HOEVEEL U OP DE SCHAKELKNOP DRUKT.
- ALS VOEDSEL DE BLENDER OVERBELAST OF BLOKKEERT TIJDENS HET GEBRUIK. HET STOPT AUTOMATISCH EN DE RODE EN WITTE LAMPJES KNIPPEREN AFWISSELEND.
- WANNEER DE INGREDIËNTEN- EN VLOEISTOFLIJN ZICH ONDER DE HOOGTE VAN DE MESSEN BEVINDT, STOPT DE MACHINE NA 5 SECONDEN TER BESCHERMING EN KNIPPERT HET RODE LAMPJE 3 KEER.
- HET RODE LAMPJE KNIPPERT 10 KEER ALS DE BATTERIJ LEEG IS.

1

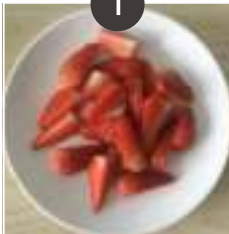

VOEDSEL IN MEERDERE
STUKKEN SNIJDEN, VEL
EN NOOT VERWIJDEREN
(ONGEVEER 2 CM)

2

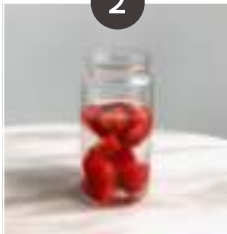

GIET WATER EN MELK IN
DE GLAZEN KAN

3



KANTELE DE MACHINE TOT
EEN HOEK VAN 45° EN
ZET DE MACHINE AAN!

4



OM HET VOEDSEL TE
HELPEN MENGEN,
SCHUDT 5-8 KEER
TIJDENS HET MENGEN

MAKKELIJK TE INSTALLEREN

CONTROLEER OF ZOWEL DE DEKSEL ALS DE BASIS DE SILICONEN RINGEN OP HUN PLAATS HEBBEN;
ZET DE KAN OP DE BASIS EN DRAAI HEM VERVOLGENS VOLLEDIG MET DE KLOK MEE OM TE VERGRENDELEN;
DRUK OP DE SCHAKELKNOP OM TE WERKEN (MET WIT LICHT)

**BATTERIJCAPACITEIT IS 2400MAH,
GEBRUIK EEN USB-KABEL VOOR HET
OPLADEN AANGESLOTEN OP EEN ADAPTER
(1A OF MINDER DAN 1A), POWERBANK,USB-POORT
VAN COMPUTER OF AUTO-OPLAADPOORT**



1 PLAATS DE "MICRO B-KANT" VAN USB (KLEINE POORT) IN DE OPLAADPOORT.

2 PLAATS DE "USB-KANT" (GROTERE KANT) IN DE ADAPTER, POWERBANK, USB-POORT VAN DE COMPUTER EN ETC.

MEER INFORMATIE



SCAN DE BOVENSTAANDE QR-CODE MET UW CAMERA-APP OP UW TELEFOON EN KRIJG MEER INFORMATIE OVER HET GEBRUIK VAN DE BLENDER

NO	FOUT FENOMEEN	FOUT ANALYSE	OPLOSSING
1.	HET RODE LAMPJE KNIPPERT 5 KEER, MAAR DE MACHINE WERKT NIET	DE CONTAINER IS NIET CORRECT OP DE BASIS GEÏNSTALLEERD	INSTALLEER OPNIEUW A.U.B.
2.	DE MACHINE WERKT NIET EN HET RODE LAMPJE KNIPPERT 10 KEER	BATTERIJHOEVEELHEID IS NIET GENOEG OF GEEN STROOM	INSTALLEER OPNIEUW A.U.B.
3.	DE MACHINE STOPT TIJDENS HET BLENDEN	BIJ TE WEINIG VOEDSEL OF TE VEEL, ZAL DE MACHINE STOPPEN VOOR BESCHERMING	VERMINDER WAT ETEN EN BEGIN DAN OPNIEUW
4.	HET RODE EN WITTE LAMPJE KNIPPERT 10 KEER TIJDENS HET GEBRUIK	DE MOTOR IS VERGRENDELD	ALS ER GEEN VOEDSELBLOKKADE IS, BEGIN DAN OPNIEUW
5.	LEKKEND WATER	HET SILICONENGEDEELTE IS NIET CORRECT GEÏNSTALLEERD	INSTALLEER HET SILICONEN ONDERDEEL OPNIEUW!
6.	ER IS WAT ROOK BIJ GEBRUIK	LANGDURIG GEBRUIK, DE MACHINE IS OVERVERHIT EN AUTOMATISCH BESCHERMD;	GELIEVE DE MACHINE 30-60 MINUTEN AF TE KOELEN EN DAN OPNIEUW TE BEGINNEN

WARME HERINNERING

- 1 ER ZAL EEN FOUT OPTREDEN ALS UW GLAZEN KAN BESCHADIGD IS. STOP DE MACHINE ONMIDDELIJK EN SCHROEF DE KAN LOS ALS ER SPRAKE IS VAN LEKKEN, LOSSE SCHROEVEN OF EEN STORING.
- 2 HET IS HET BESTE OM DE MACHINE TUSSEN DE 3-5 UUR OP TE LADEN. LAAD DE BLENDER NIET 'S NACHTS OP. DIT IS NIET GOED VOOR DE BATTERIJ.
- 3 DE MACHINE MAG ALLEEN WORDEN GEBRUIKT ALS ER WATER, MELK OF ANDERE VLOEISTOFFEN IN DE CONTAINER ZITTEN OP EEN HOOGTE ERBOVEN EN DE MESSEN AFDEKKEN. ALS HET VOEDSEL NIET MENGT, VOEG DAN MEER VLOEISTOF TOE.
- 4 WAS DE BASIS VAN DE MACHINE NIET MET WATER. DOMPEL DE BASIS NIET ONDER IN WATER. ALS ER WATER IN DE SCHAKELAAR OF OPLAADPOORT KOMT, ZAL DE MACHINE BESCHADIGD RAKEN.