

# COOKY


4847652 Handle for cookware Instructions for Use



- 1 Place the open handle on the rim of the COOKY pan or pot.



- 2 Pull the lever to lock the handle in position so that the handle grips the edge of the pan or pot.

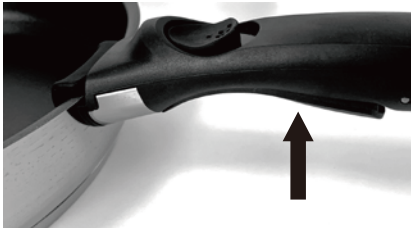

The handle is now locked in position and you can use your COOKY pan or pot.

- 3 Remove the handle.


- Place the pan or pot on a flat, stable, heat-resistant surface.
- Pull the button towards you to unlock the clip.
- The handle is opened and then release the button. It can now be removed from the pan or pot.



 **Caution :** Never pull the unlocking button while handling the pan or pot.

# COOKY

4847652 Poignée pour ustensile de cuisine Instructions d'utilisation

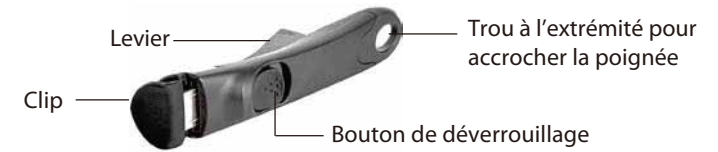

- 1 Placez la poignée ouverte sur le bord de la casserole ou de la poêle COOKY.



- 2 Tirez le levier pour verrouiller la poignée en position de sorte que la poignée saisisse le bord de la casserole ou de la poêle.




La poignée est maintenant verrouillée en position et vous pouvez utiliser votre casserole ou poêle COOKY.

- 3 Retrait de la poignée.

- Placez la casserole ou la poêle sur une surface plane, stable et thermorésistante.
- Tirez le bouton vers vous pour déverrouiller le clip.
- La poignée s'ouvrira, puis relâchez le bouton. La poignée peut maintenant être retirée de la casserole ou de la poêle.



 **Attention :** Ne tirez jamais le bouton de déverrouillage lorsque vous vous servez de la casserole ou de la poêle.