
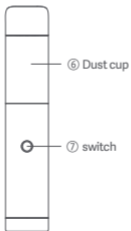


Portable Wireless Vacuum Cleaner Instruction Manual

Please read these instructions carefully before using the product and keep it in a safe place.

ROIDMI

Product
Introduction

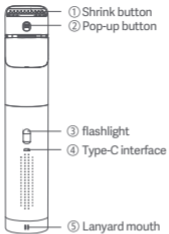

Product Use

Press and hold to power on, the status light is always on, and the suction will cycle between standard gear and enhanced gear.

1. Flip the dust cup mouth up and hear the "until it clicks" connection sound;
2. Press the brush to open the button to use the brush, and press the button to complete the storage.
3. Flip the dust cup suction down to store the soft brush assembly.



Product Cleaning

Filter removal and cleaning

1. Rotate clockwise and open the dust cup;
2. Remove the filter element and clean the filter element with a damp cloth or disposable paper towel. It can also be washed. After washing, it can be dried with natural wind. Recommended according to Replace the filter element with the actual frequency of use.



Basic Parameters

Product Name	Portable Cordless Vacuum Cleaner Pro	Product Number	XCQP1F1M1PRO/XCQ01M1UTPRO
Rated Operating Voltage	10.8V ---	Rated Power	90W
Lithium Battery Capacity	2000mAh/21.6Wh	Product Size	Φ60×275mm
Rated Charging Voltage	5V-2A,DC	Charging Time	Approximately 2.5hour
Product Weight	Approximately 0.5kg	Dust Cup Capacity	Approximately 100ml
Life time (Standard/Enhanced)	Approximately 24minute/9 minute	Noise	Standard 75dB (A)

Product hazardous Substance Declaration

Part Name	Harmful Substance					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Plastic shell	○	○	○	○	○	○
Circuit board	X	○	○	○	○	○
Cable	○	○	○	○	○	○
battery	X	○	○	○	○	○
magnet	○	○	○	○	○	○

This form has been prepared in accordance with the provisions of SJ/T 11364.

○ : Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572.

X : Indicates that the hazardous substance is at least in a homogeneous material of the part exceeding the limit specified in GB/T 26572.



The product contains harmful substances or elements that will not leak.

This product meets the RoHS environmental protection requirements; there is no mature technology in the world to replace or reduce the lead content in electronic ceramics and copper alloys. The environmental protection use period of this product means that under normal conditions of use, the product contains harmful substances or elements that will not leak.

One year warranty

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Safety Precautions

Please read the manual before use.

Warning: In order to avoid injury and unnecessary property damage to you and others, please read and observe the following "Safety Precautions" before use.



caveat Precautions that could result in death or serious injury when operating incorrectly.

1. Do not pull the plug wet or touch the charging socket;
2. Do not use a vacuum cleaner to clean flammable liquids such as kerosene, gasoline, etc., objects with Mars, flammable dust such as toner cartridges, or use vacuum cleaners in the vicinity of the above items and inflammable and explosive gases to avoid fire;
3. Do not disassemble, repair or modify it yourself to avoid fire, injury or poor operation, except for the replacement of consumables in accordance with this manual;
4. During charging or use of the product, the body deformation is abnormally hot, there is burnt smell, and there is abnormal noise during operation. Please cut off the power immediately and unplug the product, place the product in the open space and no near combustibles, ensure safety and manufacture. Replace or repair the dealer or its maintenance staff to avoid danger;
5. The battery is a sealed device and there are no safety hazards under normal conditions. If the liquid flows out of the battery under extreme conditions, it may cause irritation or burns. If inadvertently contacted, please follow the precautions below: 1 if skin contact - wash with soapy water; 2 if eye contact - rinse immediately with water At least 15 minutes and seek medical help;
6. If the cord is damaged, it must be replaced by the manufacturer, its service agent or a professional to avoid danger;
7. Always remove the battery from the appliance before disposing of the vacuum cleaner;
8. Do not approach the pacemaker;
9. Do not operate for a long time with the vacuum cleaner clogged;
10. Do not block the exhaust port (to avoid deformation, malfunction or fire caused by overheating);
11. Do not drop this product and collide with other objects to apply pressure to the product (to avoid fire and electric shock due to malfunction);
12. The used battery pack should be safely recycled, please do not discard it;
13. Do not use or store the vacuum cleaner under extremely adverse conditions, such as extreme temperature. It is recommended to use it indoors at 0-40 °C ambient temperature, please store it in a cool dry place;
14. Do not use this vacuum cleaner to clean the liquid.



RoHS



CE

Manufacturer: ROIDMI Information Technology Co., Ltd.

Address: 4F, C8 Building, No.1699 Huishan Road, Life Science and Technology Park, Huishan District, Wuxi, Jiangsu, PRC

Executive Standard: EN55014-1:2017, EN IEC 61000-3-2:2019, EN 61000-3-3:2013, EN 55014-2:2015, EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A2:2019, EN 60335-2-2:2010+A11:2012+A1:2013, EN 62233:2008, 2011/65/EU

Service e-mail: wxxm@roidmi.com

Consult the website for product sales information: www.roidmi.com/en

CE Declaration URL: http://doc.roidmi.com/web/#/27?page_id=0

Made in China

NO.05.2021