DēLonghi

DRAGON 4 PRO

ELECTRIC OIL FILLED RADIATOR

Get Started

This short guide is not intended to explain all the functions of the appliance. Please read all of the owner's instruction booklet before use.

TRD50615E

HOW TO SET UP

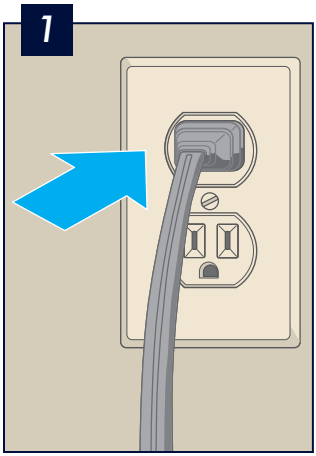

Plug the unit into an outlet.

Hour digits will blink.

Set clock: Turn dial to set current hour in military time (ex: 13 equals 1pm; 22 equals 10pm).

Push dial to confirm hour.

Minute digits will blink.

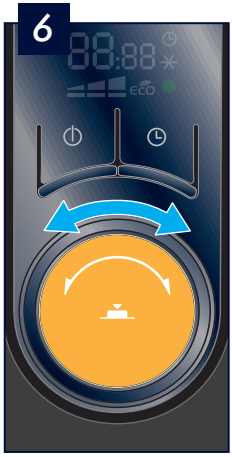

Turn dial to set current minutes.

Push dial to confirm minutes. A long beeping sound will be heard.

MANUAL OPERATION MODE (TEMP/POWER LEVELS)

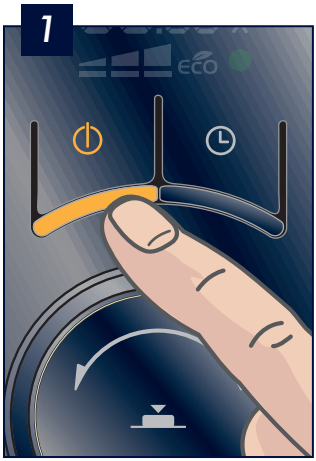

Push the ⏻ standby/power button to turn unit ON.

Turn dial to select desired temperature. New temperature is now set.*

If you want to change power level, press dial twice and follow steps 4 and 5.

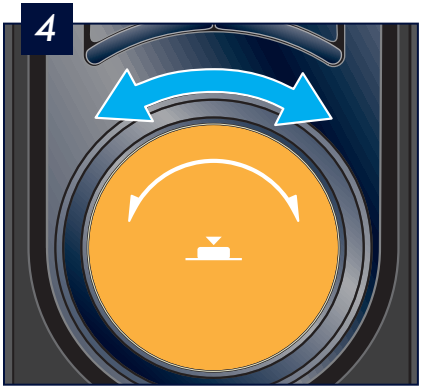

Turn dial to desired power level. (see chart below)

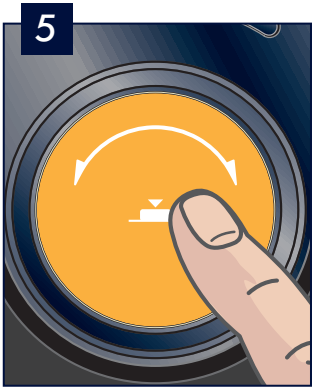

Push dial to confirm power level selection.

* *Note:*
It is not possible to switch between Fahrenheit and Celsius.

SELECTED VERSUS WORKING POWER LEVELS

The unit will automatically switch between the unit's working power levels depending on the difference between your desired selected temperature and the actual room temperature.

Note: If none of the working power level bars are lit, the unit is not consuming any wattage.

Selected power level

Working power level

TIMER OPERATION MODE

Explaining T1 and T2

Note: T2 temperature must not exceed the temperature of T1

NOTE: Green and red indicators differentiate the two timer settings. They do NOT stand for "go" and "stop".

In the example above, T1 shows Timer 1's MIN (50°F) and MAX (83°F) temperature range as well as the unit's default temperature setting (69°F). T2 shows your choice of Timer 2 set to unit's default of OFF, set to anti-freeze function temperature (41°F), or set between MIN (50°F) and any temperature lower than your MAX setting of Timer 1 (green).

Preset Daily Timer Program

The default preset daily timer program is the following:

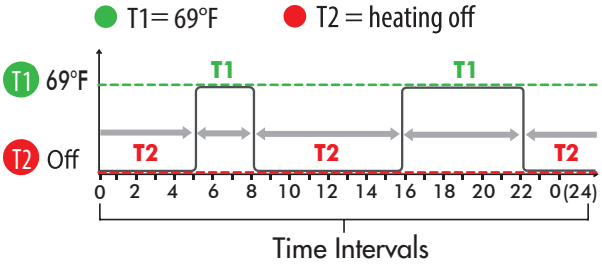

Note: This chart is showing timer settings as follows:

T2 from midnight to 5am,
T1 from 5am to 8am,
T2 from 8am to 4pm,
T1 from 4pm to 10pm,
T2 from 10pm to midnight.

Setting Timer Temperatures T1 and T2

Turn unit ON (display should show temperature and power level).

Push dial once, then power level will blink.

Turn dial till clock 🕒 blinks.

Press dial to confirm (green light will flash).

To modify red (T2), turn dial till red light blinks. Push dial to confirm. Or, to modify green (T1 already flashing), push dial to confirm.

Display will show the current setting for the green or red temperature.

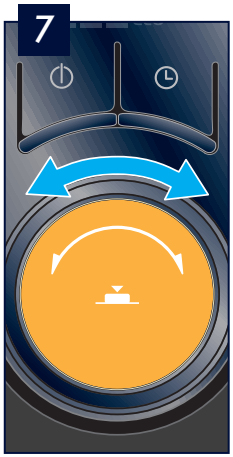

Turn dial to the desired temperature. Push dial to confirm.

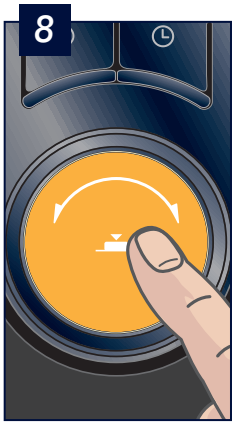

Push dial to confirm. Repeat steps 2 to 8 for temperature not yet set (T1 or T2).

SETTING TIME PERIODS FOR T1 AND T2

Changing 24 Hour Daily Timer Program

Turn off unit to STANDBY mode (display shows time).

Push and hold the timer button for **5** seconds.

Display will show **00:00** (midnight). Green LED (T1) will be blinking.

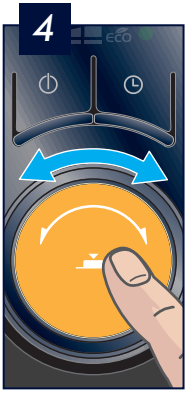

Turn dial to select green (T1) or red (T2). Press dial to confirm.

00:00 will be blinking and green (T1) or red (T2) LED will light.

Turn dial to select the ending time for the first or previous program selected. Push dial to confirm.

The ending time will appear and green (T1) or red (T2) LED indicator will blink.

Turn dial to select between green (T1) and red (T2). Push dial to confirm.

Last time setting will flash. Turn dial clockwise to next time setting. Press dial to confirm. Repeat steps 8 and 9 for additional settings to cover ALL 24 hours. Last time setting must be to **00:00** (midnight). If timer set correctly long beeping sound will confirm.

Activate Timer Settings (follow steps 1-2)

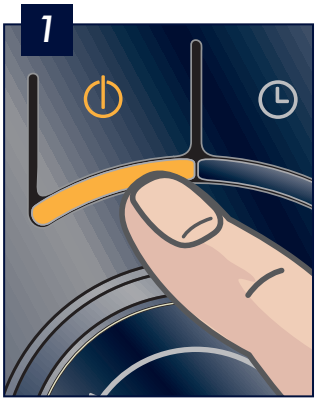

Push ⏻ STANDBY/POWER button to turn on unit.

Push the 🕒 timer button to activate the timer program.

General Note:
If you don't wish to set your own timer settings, you can use the preset settings (see page 4).

Note for step 4:
A switch from red to green or green to red indicates when programmed timer settings are scheduled to change.

Display Timer Settings (follow steps 1-5)

Push and hold the 🕒 timer button for **5** seconds.

The display shows which temperature settings (green T1 or red T2) have been programed starting from midnight (**00:00**).

Turn dial clockwise to scroll thru the programmed time settings from 00:00 (midnight) thru 23:45 (11:45pm).

www.delonghi.com

like us: DeLonghi North America – follow us @DeLonghiNA

5711011411_00_0219